

Installation, commissioning and operating instructions

for valve-regulated stationary lead-acid batteries



Similar to the illustration

Installation, commissioning and operating instructions for valve-regulated stationary lead-acid batteries

Type und Design: PRIOTEX Medien GmbH, 59609 Anröchte

© 2013 HOPPECKE Batterien GmbH & Co. KG
P.O. Box 11 40
D-59914 Brilon

All rights reserved, even for patent and utility patent applications.
The distribution and duplication of this document and the use and disclosure of its contents are prohibited unless written permission is granted by HOPPECKE Batterien GmbH & Co. KG. Noncompliance will result in a claim for damages.

Preface

Valued customer,

Thank you for choosing a HOPPECKE product.

Please read this documentation carefully and completely before performing any tasks using the lead-acid batteries. This documentation contains important information regarding safe and correct unpacking, storage, installation commissioning, operation and maintenance of lead-acid batteries. Non-compliance with these safety instructions can lead to severe personal injury and material damage. HOPPECKE is not responsible or liable for direct or indirect injury or damage resulting from improper use of this product; all warranty claims become null and void.

HOPPECKE reserves the right to make changes to the contents of this documentation. HOPPECKE Batterien GmbH & Co. KG is not responsible for errors in this documentation. HOPPECKE is not liable for direct damage related to the use of this documentation.

Our products are undergoing constant development. For this reason, there may be discrepancies between the product that you have purchased and the product as represented in this documentation. Please keep this documentation so that it is immediately available for all personnel who must perform work in connection with the batteries.

If you have questions, we would be happy to help you: You can reach us via Email:

info@hoppecke.com

or by phone on working days between the hours of 8 am and 4 pm (CET) at the following number:

Telephone +49(0)2963 61-0

Fax +49(0)2963 61-481.

Your Team from
HOPPECKE Batterien GmbH & Co. KG

Postal address:

HOPPECKE Batterien GmbH & Co. KG
P.O. Box 11 40
D-59914 Brilon
Germany

Head office address:

HOPPECKE Batterien GmbH & Co. KG
Bontkirchener Straße 1
D-59929 Brilon-Hoppecke
Telephone +49(0)2963 61-0
Fax +49(0)2963 61-449
Internet www.hoppecke.com
Email info@hoppecke.com

Used Symbols

The following safety notes need to be observed. Listed symbols are used multiple times for safety relevant information:



Danger!

Personal health, batteries or the environment are at risk.
Failure to observe this hazard notice can lead to severe or fatal injury.



Attention!

Batteries, materials or the environment are at risk. Personal safety is not at risk.
Failure to observe this notice can lead to malfunction or damage to the batteries. In addition, material and environmental damage may occur.



Risk of explosion or blast, splashing of hot or molten substances.
Risk of explosion and fire, avoid short circuits.
Avoid electrostatic charges and discharges/sparks.
Failure to observe this hazard notice can lead to severe or fatal injury.



Risk of corrosion caused by leaking electrolyte.
Electrolyte is strongly corrosive.



Electrical voltages hazardous to health may cause fatal injury.
Metal parts of the battery are always alive, therefore do not place items or tools on the battery.
Failure to observe this hazard notice can lead to severe or fatal injury.



Warning! Risks caused by batteries.



Do not smoke.
Do not use any naked flame or other sources of ignition.
Risk of explosion and fire.



General prohibition.



Observe these instructions and keep them located near the battery for future reference.
Work on batteries only by trained qualified personnel.



While working on batteries wear face protection (impact resistant visor according to EN 166 class F or similar), protective eye-glasses, protective gloves and clothing.
Observe accident prevention regulations as well as EN 50110-1 and IEC 62485-2 (Stationary batteries) or IEC 62485-3 (Traction batteries).



Wear conductive shoes.



General order.



Any acid splashes on the skin or in the eyes must be rinsed with plenty of clean water immediately.
Then seek medical assistance.
Spillages on clothing should be rinsed out with water.



Recycling.



Pb

Spent batteries have to be collected and recycled separately from normal household wastes.



General notice or tip for better understanding and optimum use of the battery or batteries.

0 Safety notices

0.1 General Information



Danger!

Incorrect use of the products described here can lead to personal and material damage.
HOPPECKE is not responsible or liable for direct or indirect personal and material damages which occur as a result of handling the products described here.



Risk of explosion and fire, avoid short circuits.
Avoid electrostatic charges and discharges/sparks.
Attention! Metal parts of the battery or batteries are always live, so never place foreign objects or tools on top of the batteries.
Electrostatic discharges can ignite oxyhydrogen gas and therefore cause an explosion of the battery! Exploding parts can lead to heavy injuries.



Electrolyte is highly corrosive. Contact with electrolyte is impossible in normal working conditions.
Electrolyte coming out of damaged cells or blocks is highly corrosive too. Acid splashes in the eyes or on the skin must be washed with plenty of clean water. Then consult a doctor immediately!
Clothing contaminated by acid should be washed in water.
Leaking electrolyte is harmful to the eyes and skin. Refer also to *chap. 2.3, Safety precautions!*



Attention!

Incomplete or insufficient maintenance can lead to unexpected battery failure or reduction of battery power. Maintenance work must be completed once every six months by HOPPECKE specialists or by qualified personnel trained by HOPPECKE in accordance with the instructions in this documentation.



Danger!

Work on batteries, especially installation and maintenance should be performed by trained HOPPECKE specialists (or by qualified personnel trained by HOPPECKE) only; personnel must be familiar with battery handling and the required precautionary measures. Unauthorized persons must keep away from the batteries.



Without proper and regular maintenance of the batteries by HOPPECKE specialists (or personnel authorized by HOPPECKE), the safety and reliability of the power supply during operation cannot be ensured.



Sealed lead-acid batteries are always filled before delivery. Sealed stationary lead-acid battery cells must not be refilled with water during the entire battery service life. Overpressure valves are used as sealing plugs. These plugs cannot be opened without damaging.

HOPPECKE offers the following type ranges as valve regulated lead-acid (VRLA) batteries:

- net.power
- power.com HC
- power.com SA
- power.com XC
- power.com H.C
- grid | power VR L (OPzV/OPzV bloc)
- grid | power VR M (power.com SB)
- grid | power VR X
- grid | Xtreme
- sun | power VR L (OPzV solar.power/OPzV bloc solar.power)
- sun | power VR M (solar.bloc)



The product names used for HOPPECKE battery series have been changed. In the overview below you will find the respective counterparts of old and new names. In the rest of this document old names will be listed in brackets.

OLD	NEW
OPzV bloc solar.power	sun power VR L
OPzV solar.power	sun power VR L
power.com SB	grid power VR M
solar.bloc	sun power VR M
OPzV/OPzV bloc	grid power VR L

Following symbols and pictograms are pictured on each battery cell or on each battery block:



Read the instruction for installation, commissioning and operation carefully.



Always wear protective goggles and cloths.



Avoid naked flames and sparks.



General danger warning.



Risk of electrical voltage.



Risk of chemical burns through electrolyte.



Risk of explosion, avoid short circuits, electrostatic charge and discharge/sparks.



Battery with low concentration of antimony.



Used batteries with this symbol have to be recycled.



Used batteries which are not sent for recycling are to be disposed of as special waste under all relevant regulations.

0.2 Safety instructions for working with lead-acid batteries



When working on batteries, always observe the safety regulations documented in DIN EN 50110-1 (VDE 0105-1) "Operation of electrical installations":

- Always proceed in the correct order when installing and removing the battery and when connecting it to the charger
- Pay attention to the polarity
- Make sure the connections are tight
- Use only battery charger leads that are in perfect technical condition and that have adequate cross-sections
- Batteries must not be connected or disconnected while current is flowing or while the charger is switched on
- Before opening the load circuit, make sure that the charger is in a switched-off state by measuring the voltage
- Secure the charger to prevent it from being switched back on again
- Heed the instructions given in the operating manual provided by the manufacturer of the battery charger



Danger!

Under certain conditions, there is a risk caused by electrical battery voltage and in the event of a short circuit, extremely high short circuit currents may flow.

Observe the following regulations (IEEE standards valid for USA only):

- ZVEI publication "Instructions for the safe handling of electrolyte for lead-acid accumulators"
- VDE 0510 Part 2: 2001-12, in accordance with IEC 62485-2: "Safety requirements for secondary batteries and battery installations – Part 2: Stationary batteries"
- DIN EN 50110-1 (VDE 0105-1): "Operation of electrical installations"; German version EN 50110-1:2004
- IEEE Standard 485-1997: "Recommended Practice for Sizing Large Lead Acid Storage Batteries for Generating Stations"
- IEEE Standard 1187-2002: "Recommended Practice for Installation Design and Installation of Valve Regulated Lead-Acid Storage Batteries for Stationary Applications"
- IEEE Standard 1188-2005: "Recommended Practice for Maintenance, Testing and Replacement of Valve Regulated Lead-Acid (VRLA) Batteries for Stationary Applications"
- IEEE Standard 1189-2007: "Guide for Selection of Valve-Regulated Lead-Acid (VRLA) Batteries for Stationary Applications"
- IEEE Standard 1375-1998: "Guide for Protection of Stationary Battery Systems"
- DIN EN 50110-1 (VDE 0105-1): "Company of electrical instructions"; German copy EN 50110-1:2004



Batteries contain corrosive acids which can lead to chemical burn on skin and eyes if the battery is damaged.



There is a risk of explosion and fire due to explosive gas and injuries from deflagration and flying particles.



You must wear safety goggles while handling the battery!

When working on batteries, wear a face protection (impact-resistant visor according to EN 166 class F or similar), protective goggles, protective gloves and the personal protective clothing provided!

0.3 Warranty, Protocol, Commissioning, Protocols Maintenance

In order to prove the correct commissioning and maintenance these have to be documented¹. Below you can find a table as template for this purpose. Alternatively own templates can be used. Nevertheless these should contain the relevant data/data fields. The documentation of commissioning and maintenance shall be kept together with further documentation of the battery/battery installation. In case, that the documentation of commissioning and maintenance should be kept separately nearby the battery/battery installation, the template can be detached from the manual.

Remark: Below template includes fields for documentation of the acid density – these fields are not intended to be used for VRLA type products and can thus be left empty.



The protocol can be downloaded separately at: <https://www.hoppecke.com/en/> or use the QR code.

Please be aware that the manual which has been delivered is updated at the time of delivery, nevertheless the updated version should be always downloaded at the hopp.net: <https://www.hoppecke.com/de/> This way it is ensured that the actual technical information is applied during some changes or additions in the battery installation.

¹ The documentation must be submitted to the producer in the unlikely event of a warranty claim.



Maintenance/Commissioning Protocol

Maintenance/Commissioning Protocoll



Technician name

Customer Address Location Address

Battery

ID	Cell Conector
Serial Number	Cell plug
Brand	Charger
Type	Brand
Manufacturing Date	Type
Operation type	Characteristic Line
n cells/ batteries	Device No.
n strings	Manufacturing Date
Voltage (V)	

Inspection/ Comissioning activities

- | | |
|---|---|
| <input type="checkbox"/> Check all screwed connectors according to the specified torque | <input type="checkbox"/> Inspection day |
| <input type="checkbox"/> voltage adjusted | <input type="checkbox"/> Offer will be sent |
| <input type="checkbox"/> Battery cleaned | <input type="checkbox"/> Final consultation conducted |
| <input type="checkbox"/> Topped up | |

Results

Battery Inside	OK?	Overall condition OK?
Battery Outside	OK?	
Rack/Cabinet	OK?	

Date of last service:

Recommendations

.....
Date/Signature Technician

.....
Date/Signature Customer



Maintenance/Commissioning Protocoll



Technician name

Battery Inside

Surface Flaking	Charging Means
Risk of Short Circuit	Sediment
Expansion	Separator

Electrolyte

Electrolyte Level before refill	Nominal Electrolyte density (kg/l)
Cells with too high/too low electrolyte temperature	Cells with too high/low electrolyte density

Voltage

Nominal float voltage (V)	Measured float voltage
Cells with low or high voltage	voltage adjusted

Current

Charge retention (mA)	Nominal capacity (Ah) - C10 (Pb), C5 (FNC)
Superimposing ~ (A)	

Battery Outside

Room Temperatur (°C)	Highest Surface Temp. (°C)
Leaking cells	Amount of refilled distilled water (l)

Rack/Cabinet

Type	Battery Rack		
Coating	OK?	Isolation (measured)	OK?



Maintenance/Commissioning Protocoll

Technician name _____

Single Cells/Blocks Voltage, Temperature, Density									
Block/Cell	U [V]	Block/Cell	Temp. [°C]	Density [kg/l]	Block/Cell	U [V]	Block/Cell	Temp. [°C]	Density [kg/l]
1		1			47		47		
2		2			48		48		
3		3			49		49		
4		4			50		50		
5		5			51		51		
6		6			52		52		
7		7			53		53		
8		8			54		54		
9		9			55		55		
10		10			56		56		
11		11			57		57		
12		12			58		58		
13		13			59		59		
14		14			60		60		
15		15			61		61		
16		16			62		62		
17		17			63		63		
18		18			64		64		
19		19			65		65		
20		20			66		66		
21		21			67		67		
22		22			68		68		
23		23			69		69		
24		24			70		70		
25		25			71		71		
26		26			72		72		
27		27			73		73		
28		28			74		74		
29		29			75		75		
30		30			76		76		
31		31			77		77		
32		32			78		78		
33		33			79		79		
34		34			80		80		
35		35			81		81		
36		36			82		82		
37		37			83		83		
38		38			84		84		
39		39			85		85		
40		40			86		86		
41		41			87		87		
42		42			88		88		
43		43			89		89		
44		44			90		90		
45		45			91		91		
46		46			92		92		

1. When renewing old batteries, ensure that all electrical loads are switched off before removing the old battery (separators, fuses, switches). This must be carried out by qualified personnel.



Danger!

2. Remove all wrist watches, rings, chains, jewelry and other metal objects before working with batteries.

3. Use insulated tools only.

4. Wear insulating gloves and protective shoes (refer also to Chap. 2.2).



Danger!

5. Never place tools or metal components on top of the batteries.



Danger!

6. Make sure that the battery or batteries are not mistakenly grounded. If the system is grounded, terminate the connection. Touching a grounded battery by mistake can result in severe electric shock. The risk caused by an incorrect connection can be significantly reduced by terminating the ground connection.



Attention!

7. Before establishing connections, make sure to check the correct polarity – better one too many times than one too few.



Danger!

8. Filled lead-acid batteries contain highly explosive gas (hydrogen/air mixture). Never smoke, handle open flames or create sparks near the batteries. Always avoid electrostatic discharge; wear cotton clothing and ground yourself if necessary.



Danger!

9. Blocks/cells are very heavy. Make sure they are installed securely. Only use suitable means of transport. Do not lift or pull up blocks/cells on the poles.



Danger!

10. Never carry batteries by the battery terminals.



Attention!

11. These batteries contain lead and cannot under any circumstances be disposed of with household waste or at a waste dump at the end of their service life (for more information, refer to Chap. 1.4).



Attention!

12. Contains lead-metal (CAS-Nr. 7439-92-1). This metall is one of the reach list chemicals.



Table of contents

Preface	3	5.10.1 Connection terminals	33
Symbols	4	5.10.2 Type of connection cable	33
0 Safety notices	5	5.10.3 Clamping batteries using battery connectors	33
0.1 General Information	5	5.10.4 Installing the screwed connectors	34
0.2 Safety instructions for working with lead-acid batteries	7	5.10.5 Clamping connection plates onto the batteries	35
0.3 Warranty, Protocol Commissioning, Protocol Maintenance.....	8	5.11 Connect the battery system to the DC power supply	35
1 General Information	12	5.12 Commissioning charge (initial charge)	36
1.1 Safety precautions	12	5.12.1 Commissioning charge with constant voltage (IU characteristic curve)	37
1.2 Technical Data	12	5.12.2 Extended commissioning charge	37
1.2.1 Example for single cell	12	6 Battery operation	37
1.2.2 Identification plate battery	13	6.1 Discharging	38
1.3 CE-Mark	13	6.2 Charging – general	38
1.4 Disposal and recycling	13	6.2.1 Standby parallel operation	39
1.5 Service	13	6.2.2 Floating operation	40
2 Safety	14	6.2.3 Switch mode operation (charge/discharge operation)	40
2.1 General	14	6.2.4 Float charging	41
2.2 Personal safety equipment, protective clothing, equipment	14	6.2.5 Equalizing charge (correction charge).....	41
2.3 Safety precautions	15	7 Settings for charging HOPPECKE sun power VR L (OPzV solar.power/OPzV bloc solar.power) and sun power VR M (solar.bloc) batteries	43
2.3.1 Sulfuric acid	15	7.1 Charge and discharge parameters.....	43
2.3.2 Explosive gases	15	7.2 Alternating currents.....	44
2.3.3 Electrostatic discharge	16	7.3 Temperature influence on battery performance and service life	45
2.3.4 Electric shock and burns	17	7.3.1 Temperature influence on battery capacity	45
3 Transport	18	7.3.2 Temperature influence on battery design life.....	45
3.1 General	18	7.4 Influence of cycling on battery behaviour	46
3.2 Delivery completeness and externally visible damage	18	7.4.1 Endurance in cycles depending on depth of discharge	46
3.3 Defects	19	7.4.2 Endurance in cycles depending on ambient temperature.....	46
4 Storage	20	7.4.3 Electrolyte freezing point depending on depth of discharge (DoD).....	47
4.1 General	20	7.5 Remarks to warranty management	48
4.2 Storage time	20	8 Battery maintenance	48
4.3 Preparing for a several-month storage period	21	8.1 Work to be performed every six months.....	48
5 Installation	21	8.2 Work to be performed annullay	49
5.1 Demands on the erection site	21	8.3 Cleaning of the battery	49
5.1.1 Calculation of safety distance	23	9 Testing the battery system	50
5.2 Filling the cells	24	9.1 Performing the capacity test (short form)	50
5.2.1 Check	24	9.2 Performing the capacity test (extended version)	50
5.2.1.1 Ventilation – preventing explosion	24	9.3 Capacity test of the battery.....	52
5.2.1.2 Ventilation – calculation for ventilation requirements of battery rooms	24	9.4 Notes on impedance measurement.....	53
5.3 Conducting an open-circuit voltage measurement	26	10 Troubleshooting	54
5.4 Installation tools and equipment	26	11 Required ventilation for hydrogen generated by batteries	54
5.5 Rack Installation	27	12 Disassembly	55
5.6 Cabinet Installation	28	13 References to the standards and regulations	55
5.7 Handling the batteries	29	Safety data sheet	56
5.8 General information on connecting the batteries	29		
5.9 Putting the cells/blocks into the racks	31		
5.10 Connecting the batteries	33		

1 General information

The electrolyte of sealed lead-acid batteries is fixed in a glass fiber fleece (AGM) or gel. Therefore an upright or horizontal installation of battery cells or blocks is basically possible. The generation of oxyhydrogen gas is extremely reduced by an internal recombination circle. Sealed lead-acid battery cells or battery blocks are not sealed gas tightly. The integrated valve has to open by pressure overload. Sealed lead-acid batteries must not be opened. HOPPECKE offers numerous sealed lead-acid batteries as single cells (nominal voltage 2 V) or blocks (nominal tension: 6 V or 12 V) for different applications.

1.1 Safety precautions



Danger!

Read this documentation carefully and completely before performing any tasks using the batteries. This documentation contains important information regarding the safe and correct unpacking, storage, installation commissioning, operation and maintenance of filled lead-acid batteries.



Danger!

To ensure your own safety as well as the safety of your colleagues and the system, it is essential that you have read and understood all instructions in this documentation and adhere to them strictly. If you have not understood the information contained in this documentation or if local regulations and conditions apply which are not covered by the documentation (or run contrary to the information in this documentation), please contact your local HOPPECKE representative. You can also contact us at our head office directly.




Attention!

If you are conducting any work on or with the battery system, it is essential that you familiarize yourself with the installation, operation and maintenance of lead-acid batteries.

1.2 Technical data

1.2.1 Example for single cell

Each single cell/each battery block has an own identification plate on the top side of the cell/block cap. Refer to the example below.

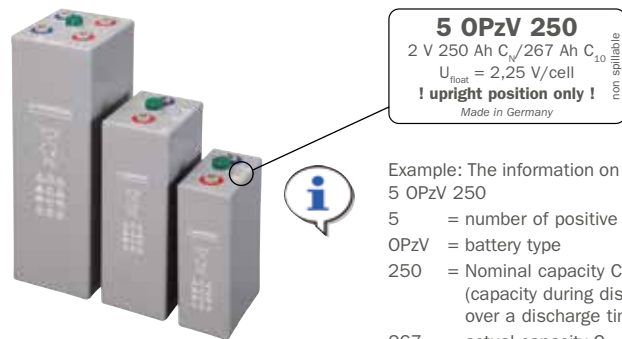

Example: The information on the identification plate is as follows:
5 OPzV 250

5 = number of positive plates

OPzV = battery type

250 = Nominal capacity C_{10}
(capacity during discharge with ten hours' current (I_{10}) over a discharge time of 10 h (t_{10}))

267 = actual capacity C_{10}
(capacity of discharge with 10 h current)

1.2.2 Identification plate battery

HOPPECKE			
Model: 191	Capacity: 5	Model: HC 124200	Capacity: 446
Model: 122	Capacity: 396	Model: 198/33	Capacity: 465
Production date: 25.05.2012	Accessories: 609413		

The identification plate of the entire battery system can be found on the battery rack or inside the battery cabinet.

The nominal voltage, the number of cells/blocks, the nominal capacity ($C_{10} = C_N$) and the battery type are listed on the identification plate of the system.

Fig. 1-1: Example for type plate on battery rack

1.3 CE and UKCA Marking



For batteries from 75 V to 1500 V DC nominal voltage, an EC Declaration of Conformity 2014/95/EC (Low Voltage Directive) with the corresponding CE marking of the battery system has been required since January 1st, 1997. This labeling obligation for battery systems also applies to Great Britain, with the difference that the associated declarations of conformity must be provided with the UKCA label in accordance with the legislation "The Electrical Equipment (Safety) Regulations 2016" from 01.01.23. The installer of the battery system is responsible for issuing the CE or UKCA declaration and affixing the CE or UKCA marking on or next to the type plate of the battery.

1.4 Disposal and recycling



Attention!



Used batteries with this marking are recyclable goods and must be sent for recycling.



Used batteries which are not sent for recycling are to be disposed of as special waste under all relevant regulations.



We offer our customers our own battery return system. All lead-acid batteries are taken to the secondary lead smelting plant at our HOPPECKE site, observing the provisions of the German

- Recycling and waste law
- Battery regulations
- Transport approval regulations
- Together with the general principles of environmental protection and our own corporate guidelines



The HOPPECKE smelting plant is the only lead smelter in Europe certified under

- DIN EN ISO 9001 (processes and procedures)
- DIN EN ISO 14001 (environmental audit)
- Specialist disposal regulations covering specialist disposal with all associated waste codes for storage, treatment and recycling

For further information: +49(0)2963 61-280.

1.5 Service

HOPPECKE has a worldwide service network that you should take advantage of. HOPPECKE service is there for you whenever you need specialist consultation for installation of the battery system, parts and accessories or system maintenance. Contact us or your local HOPPECKE representative.

HOPPECKE service:

Email: service@hoppecke.com

Refer to the HOPPECKE website for contact data of all international HOPPECKE branches:

Internet: www.hoppecke.com

2 Safety

2.1 General

If the casing of a sealed lead-acid battery is damaged, small quantities of electrolyte, acid mist or hydrogen gas may leak out. Always take the normal safety precautions when working with lead-acid batteries.



Consider all instructions and engineer standards, as mentioned in *chapter 0.2*.



Danger!

Risk of fire, explosion, or burns. Do not disassemble, heat above 45 °C, or incinerate.

2.2 Personal safety equipment, protective clothing, equipment



While working on batteries wear face protection (impact-resistant visor according to EN 166 class F or similar), protective eye-glasses, protective gloves and clothing!

Observe accident prevention regulations as well as EN 50110-1 and IEC 62485-2 (Stationary batteries) or IEC 62485-3 (Traction batteries).

If working with lead-acid batteries, the following equipment must be provided at the very least:

- Insulated tools
- Protective shoes
- Rubber gloves
- Fire extinguisher
- Rubber apron
- Protective goggles
- Face protection (impact-resistant visor according to EN 166 class F or similar)
- Face mask
- Emergency eye wash (recommended)



To avoid electrostatic charging, all textiles, protective shoes and gloves worn while working with batteries must have a surface resistance of $< 10^8$ ohm and an insulation resistance of $\geq 10^5$ ohm (refer IEC 62485-2 and DIN EN ISO 20345:2011 Personal protective equipment – Safety footwear). If possible wear ESD shoes.



Danger!

Remove all wrist watches, rings, chains, jewelry and other metal objects before working with batteries.

Never smoke, handle open flames or create sparks near the batteries.

Never place tools or metal components on top of the batteries.

The use of proper tools and safety equipment can help to prevent injury or reduce the severity of injury in case of an accident.

2.3 Safety precautions

2.3.1 Sulfuric acid

Sealed lead-acid batteries are safe when used properly. However, they contain diluted sulfuric acid (H_2SO_4) that is bonded in gel or glass mat. The bonded sulfuric acid is extremely corrosive and can cause serious injury. Further information to sulfuric acid can be found in the attached material safety data sheet.

Note also the information in the attached ZVEI leaflet “Instructions for the safe handling of lead-acid accumulators (lead-acid batteries)”.

2.3.2 Explosive gases



Danger!

Inside lead-acid batteries there is an explosive hydrogen/oxygen gas mixture that can escape from the battery. In the event of an explosion of the mixture, serious personal injury may result from the explosion or from flying particles.

- Always wear the recommended protective clothing (face protection (impact-resistant visor according to EN 166 class F or similar), protective goggles, insulated gloves and protective shoes, etc.)
- Use the correct tools only (“non-sparking” with insulated grips, etc.)
- Eliminate all potential sources of ignition such as sparks, flames, arcs
- Prevent electrostatic discharge. Wear cotton clothing and ground yourself when you are working with the batteries directly



Danger!

In case of fire, extinguish using water or CO₂ extinguisher only.

Do not point the fire extinguisher directly at the battery or batteries to be extinguished. There is a risk that the battery casing may break as a result of thermal tension. In addition, there is a risk of static charging on the surface of the battery. This could result in an explosion. Switch off the charging voltage of the battery. If extinguishing a fire, use a breathing apparatus with a self contained air supply. If using water to extinguish a fire, there is a risk that the water/foam could react with the electrolyte and result in violent spatter. For this reason, wear acid-resistant protective clothing. Burning plastic material may produce toxic fumes. If this should occur, leave the location as quickly as possible if you are not wearing the breathing apparatus described above.



Danger!

If using CO₂ fire extinguishers, there is a risk that the battery could explode as a result of static charging.








Note also the information in the attached ZVEI leaflet “Instructions for the safe handling of lead-acid accumulators (lead-acid batteries)”.

2.3.3 Electrostatic discharge

All lead-acid batteries produce hydrogen and oxygen while operating, particularly during charging. These gases leak from the battery in the ambience. Based on the mandatory natural or technical ventilation it can be assumed that a flame able oxyhydrogen concentration exists only in the close proximity of the battery. A flame able mixture of oxyhydrogen always exists inside the battery cells. This effect does not depend on the battery technology, design or manufacturer, rather than a specific characteristic of all lead-acid batteries. The energy needed for an ignition of oxyhydrogen is quite low and can be caused differently. Examples: Open flame, fire, glowing sparks or flying firebrands from grinding, electric spark from switches or fuses, hot surface areas > 200 °C and – an underestimated cause – electrostatic discharge.

Measures to avoid the ignitions of detonating gas through electrostatic discharges:

The development of electrostatic discharges on the battery or on your body or on clothes can be avoided if you consider the information below:

-  Do not wipe the battery with an arid fabric especially made of synthetic material. Rubbing on surfaces of plastic material (battery jars are typically made of plastic material) causes electrostatic charges.
-  Clean the surface of batteries with water-moistened cotton fabric only. By using a water-moistened cotton fabric you avoid the buildup of electrostatic charges.
-  While working on batteries do not rub your clothes (e. g. made of wool) on the battery. Thereby electrostatic charges could build up on the battery jar, your body or on your clothes.
-   Wear suitable shoes and clothing with special surface resistance that avoid the buildup of electrostatic charge. Thereby the buildup of electrostatic charge on the body and clothing can be avoided.
-  Do not remove self-adhesive labels, from the battery without special safety measures. Removing plastic labels can build up electrostatic charges, which can ignite oxyhydrogen gas.
-  Before pulling off the label, wipe the battery moist.

2.3.4 Electric shock and burns



Danger!

Batteries can cause severe electric shock. If there is a short circuit, very strong currents may be present. Do not touch any bare battery components, connectors, clamps or terminals. In battery systems with a nominal voltage of over 1500 V DC, you must provide equipment for splitting the batteries into cell groups with voltages lower than 1500 V DC. In order to prevent serious injury as a result of electric shock or burns, be very cautious when performing any work on the battery system.

Always wear the recommended protective clothing (insulated rubber gloves and rubber shoes, etc.) and always use insulated tools or tools made of non-conductive material. Remove all wrist watches, rings, chains, jewelry and other metal objects before working with batteries.

Before conducting work on the battery system ...

Determine whether the battery system is grounded. We do not recommend this. If the system is grounded, terminate the connection.

Touching a grounded battery by mistake can result in severe electric shock. This risk can be significantly reduced by removing the ground connection. However, the racks (or cabinets) used to hold the batteries do need to be well grounded or completely insulated.

If a battery system is grounded ...



There is a voltage between the ground and the ungrounded terminal. If a grounded person touches this terminal, there is risk of fatal injury. There is also a risk of short circuit if dirt or acid on the ungrounded terminal come in contact with the battery rack.



If an additional ground connection is made by some cells within the (grounded) battery system, there is a risk of short circuit, fire and explosion.

If a battery system is not grounded ...



If an accidental ground connection is made by some cells within the battery system, voltage is created between the ground and the ungrounded terminal. The voltage can be dangerously high – risk of fatal injury due to electric shock.



If a second accidental ground connection is made, there is a risk of short circuit, fire and explosion.



If you have questions about these instructions or any other questions regarding safety when working with a battery system, please contact your local HOPPECKE representative. You can also contact us at our head office directly.

3 Transportation damages

3.1 General

We take great care in packaging the batteries that we send to you so that they arrive without damage. We strongly recommend that you inspect the delivery for possible shipping damage as soon as it arrives.



For road transportation, filled lead-acid rechargeable batteries are not treated as dangerous goods if

- They are undamaged and sealed
- They are protected from falling, shifting and short circuit
- They are firmly secured to a pallet
- There are no dangerous traces of acids, lye, etc. on the outside of the packaging



It is essential that loads on road vehicles are properly secured.

Danger!



Monobloc batteries/battery cells are very heavy (depending on type between ca. 10 kg and max. 240 kg per cell/bloc). Wear protective shoes. Use only the appropriate transportation equipment for transport and installation.

Attention!

3.2 Delivery completeness and externally visible damage

Check immediately upon delivery (while the carrier is still present) to make sure that your shipment is complete (compare with the delivery note). In particular, check the number of battery pallets and the number of boxes with accessories. Then inspect the goods for possible shipping damage.

Note all

- Damages to the outer packaging
- Visible stains or moisture that might indicate electrolyte leakage



If the delivery is incomplete or damaged as a result of shipping

- Write a short defect notice on the delivery note before signing it
- Ask the carrier for an inspection and note the name of the inspector
- Compose a defect report and send it to us and to the carrier within 14 days

3.3 Defects



Observe all required safety measures to avoid electric shock. Keep in mind that you are handling live batteries. Observe all instructions in *Chap. 2 "Safety"*.

Unpack the goods as soon as possible upon delivery (the sooner, the better) and inspect them for any defects in case commissioning should be carried out promptly.



The sealed batteries are always filled before delivery.



Check the entire scope of delivery to make sure that it matches the detailed delivery note (or the packing list).

Failure to promptly inform the carrier of defects or incompleteness could result in the loss of your claims.

If you have questions regarding incomplete shipments or damage to the delivered products, please contact your local HOPPECKE representative. You can also contact us at our head office directly.

4 Storage

4.1 General

After receiving the batteries, you should unpack, install and charge them as soon as possible. If this is not possible, store the batteries fully-charged in a dry, clean, cool and frost-free location. Excessively high storage temperatures may result in accelerated self-discharge and premature aging. Do not expose the batteries to direct sunlight.



Attention!

Do not stack the pallets with the batteries as this can cause damage which is not covered under the warranty.

4.2 Storage time



Attention!

If the cells/batteries are to be stored for a long period of time, store them fully-charged in a dry, frost-free location. Avoid direct sunlight. To prevent damage to the batteries, an equalizing charge must be performed during a maximum storage period of six months (see Chap. 6.2.5). Calculate this exact time starting on the day of delivery. By the end of the max. storage time charge acceptance might be declined during battery recharge.

Hence, HOPPECKE recommends a suitable process of charging, which assures a gentle full charge of the battery (refer to Chap. 4.2 required process for charging the batteries by achievement of max. storage duration). If storage temperatures exceed 20 °C, more frequently equalizing charges may be necessary (at temperatures around 40 °C monthly charges). Refer also to figure 4-1 to retrieve max. storage times for different storage temperatures. Failure to observe these conditions may result in sulfating of the electrode plates and significantly reduced capacity and service life of the battery. Battery recharge during storage time should be carried out max. twice. The battery should be operated in continuous float charge mode thereafter. Battery service life commences with delivery of the battery or batteries from the HOPPECKE plant. Storage times have to be added completely to the service life.



Attention!

Required process for charging the batteries by achievement of max. storage duration: Charge with constant current of 1 A or 2 A per 100 Ah C₁₀ battery capacity. Interrupt charging when all cell voltages have risen to min 2.65 V/cell (refer also to Chap. 6.2).



Attention!

The maximum storage time for grid I Xtreme VR batteries before a refresh charge is required and the recommended open circuit inspection intervals are:

Temperature (°C/°F)	Storage Time (Months)	OCV Inspection Interval (Months)
+10/+50	48	6
+15/+59	34	6
+20/+68	24	4
+25/+77	17	4
+30/+86	12	3
+35/+95	8,5	2
+40/+104	6	2

Single cells and block batteries must be recharged when the open circuit voltage (OCV) approaches the threshold of 2.105 VpC or when the maximum storage time is reached, whichever occurs first.

4.3 Preparing for a several-month storage period

If the storage time extends over a period of several months, make sure to provide an appropriate charger so that the charging tasks can be performed promptly as previously described. For temporary storage, arrange the blocks/cells so that they can be temporarily connected in series for charging. The batteries should remain on their pallets until final installation.



To avoid having to perform the previously described work, we strongly recommend that you connect the battery or batteries to the regular charging voltage supply within six months. Failure to observe the recharging intervals will render the warranty null and void.



Attention!

Observe ventilation requirements (refer to Chap. 5.2.1.1) even for charging of temporarily connected cells.

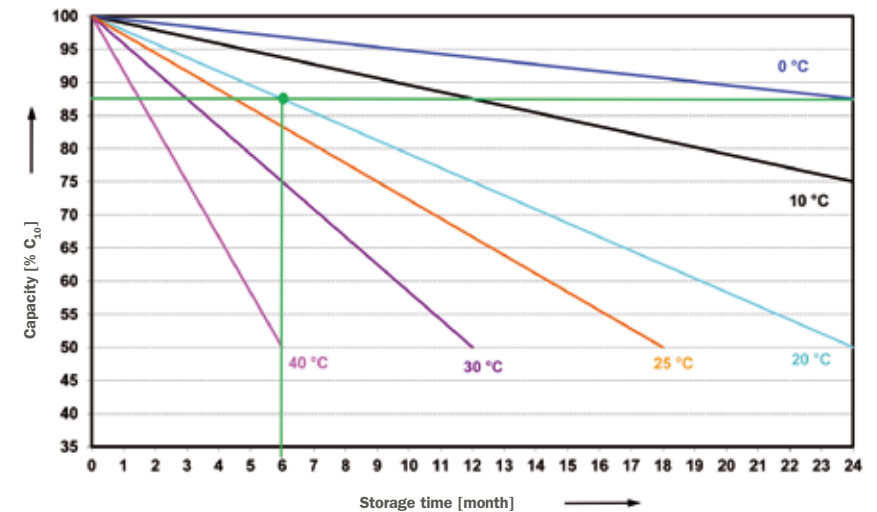


Fig. 4-1: Available Capacity vs. storage time

5 Installation

5.1 Demands on the erection site



Danger!

When renewing old batteries, ensure that all electrical loads are switched off before removing the old battery (separator, fuses, switches). This must be carried out by qualified personnel.

If you have questions regarding battery system installation, please contact your local HOPPECKE representative. You can also contact us at our head office directly.





If choosing an installation location, determining space requirements and performing the installation, observe the relevant installation drawing if it is available.

The floor must be suitable for battery installation; it must:

- Have a suitable load-carrying capacity
- Be sufficiently conductive
- Be at ground level (max. thickness of backing elements under racks and cabinets: 6 mm)
- Be as free of vibration as possible (otherwise a special rack is required)

Within the EU, follow VDE 0510 Part 2: 2001-12, in accordance with IEC 62485-2: "Safety requirements for secondary batteries and battery installations – Part 2: Stationary batteries".

Requirement	Our recommendation
Ventilation source	 <p>Sufficient room ventilation is absolutely required to limit the hydrogen concentration (H₂ concentration) in the ambient air of the battery room to a value of < 2 % by volume. Hydrogen is lighter than air. Make sure that hydrogen does not accumulate (e. g., in the ceiling area). Ventilation and deaeration openings should be placed near the ceiling.</p>
Environment	The ambience has to clean and dry. Water, oil and dirt must be kept away from the cell surface.
Passageway width in front of and between the battery racks (and cabinets)	See the IEC 62485-2
Minimum distances	See the IEC 62485-2
Access door	Lockable and fire retardant (T90).
Lighting	Recommend: at least 100 lx.
Labeling	Warning signs in accordance with IEC 62485-2.  <p>Warning sign depicting risk of electrical voltage only necessary if battery voltage exceeds 60 V DC.</p>
Risk of explosion	No sources with ignition (e. g. open flame, glowing objects, electrical switches, sparks) near to the cell openings.
Ambient temperature	The application temperature is 20 °C, which is based on IEC60896. Higher temperatures shorten the service life of the battery. All technical data is valid for the nominal temperature of 20 °C. Lower temperatures decrease battery capacity. Exceeding the limit temperatures of 55 °C is not permissible. Avoid operating at temperatures in excess of 45 °C for long periods of time. It is not permitted to expose the batteries to the direct sun light or being near to heat sources.
Ambient air	The air in the battery room must be free of impurities, e. g. suspended matter, metal particles or flammable gases. The humidity should be at a maximum of 85 %.
Earthing	If you ground the racks or battery cabinets, make sure that you use a connection to a reliable grounding point.
Battery installation	We recommend that batteries are properly installed in HOPPECKE battery racks or cabinets. The use of other operator-specific solutions may render the warranty for the batteries null and void.
Country-specific regulations	Some countries require batteries and racks to be installed in collection tanks. Please observe all local regulations and contact your local HOPPECKE representative if necessary.

Tab. 5-1: Demands on the erection site

5.1.1 Calculation of safety distance

In close proximity of the batteries the dilution of explosive gases is not always given. Therefore a safety distance has to be realized by a clearance, in which there must not be any sparking or glowing equipments (max. surface temperature 300 °C). The diffusion of the oxyhydrogen depends on the gas release and the ventilation close to the battery. For the following calculation of the safety distance 'd' it can be assumed that the oxyhydrogen expands spherical. Figure 5.1 depicts a graphic approximation of the safety distance 'd' depending on the battery capacity. Subsequently a detailed calculation is shown.

Safety clearance:

Required safety clearance needs to be calculated according to formula stated in IEC 62485-2.

Volumes of a hemisphere:

$$V_h = \frac{2}{3} \times \pi \times d^3$$

Air volume flow required to reduce the concentration of generated hydrogen H₂ in the air to 4 % max.:

$$Q_{gas} = 0,05 \times (n) \times I_{gas} \times C \times 10^{-3} \left(\frac{m^3}{h} \right)$$

$$Q_{gas} = \frac{V_h}{t}$$

Required radius of the hemisphere:

$$d = 28,8 \times (\sqrt[3]{n}) \times \sqrt[3]{I_{gas}} \times \sqrt[3]{C} \quad (\text{mm})$$

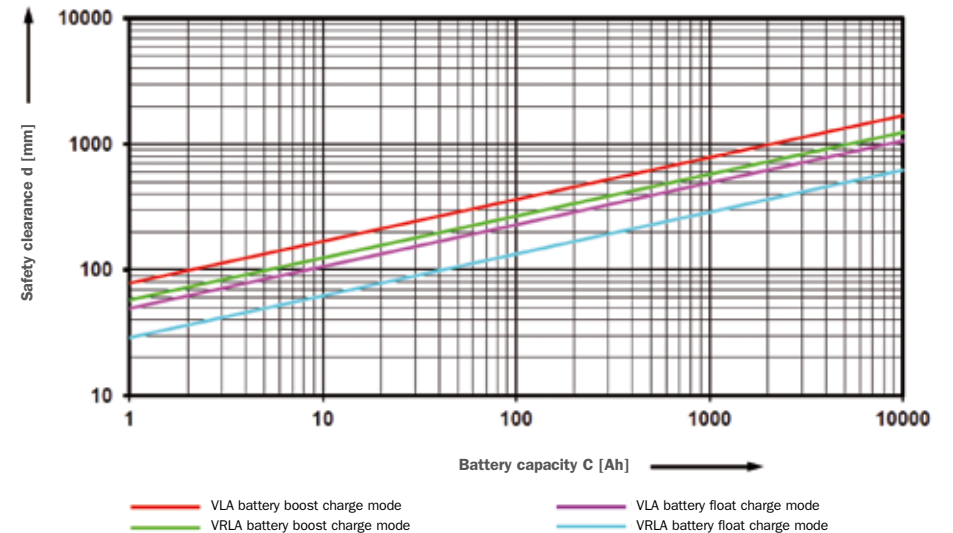


Fig. 5-1: Safety distance based on battery capacity (Source HOPPECKE)

5.2 Filling the cells



Sealed lead-acid batteries are always filled before delivery. Sealed stationary lead-acid battery cells must not be refilled with water during the entire battery service life. Overpressure valves are used as sealing plugs. These plugs cannot be opened without damaging.

5.2.1 Check

Make sure that the installation and ventilation requirements according to IEC 62485-2 are met. Should commissioning be carried out using higher amperage than you established for the type of ventilation equipment, then you must increase the ventilation in the battery room (e. g. using additional portable fans) according to the amperage applied. Increased ventilation has to be applied during commissioning and for one hour afterwards. The same applies for occasional special battery charging processes.

5.2.1.1 Ventilation – preventing explosion

It is impossible to stop gases from being generated while charging batteries; therefore, the hydrogen concentration in the air must be reduced with sufficient ventilation. Do not use sparking equipment near batteries.

The following could act as sources of ignition for gas explosions:

- Open flames
- Flying sparks
- Electrical, sparking equipment
- Mechanical, sparking equipment
- Electrostatic charge

Observe the following measures to prevent gas explosions:

- Sufficient natural or technical ventilation
- No heating using open flames or glowing objects ($T > 300\text{ °C}$)
- Separate battery compartments with individual ventilation
- Anti-static clothing, shoes and gloves (according to applicable DIN and EN regulations)
- Surface conductivity resistance: $< 10^8\ \Omega$ and insulating resistance $\geq 10^5\ \Omega$
- Hand-held lights with power cable without switch (protection class II)
- Hand-held lights with battery (protection category IP54)
- Warning and regulatory signs

The ventilation requirements for battery rooms, cabinets or compartments are based on the required reduction of the concentration of hydrogen generated during charging and safety factors which include battery aging and the potential for fault (“worst case”).

5.2.1.2 Ventilation – calculation for ventilation requirements of battery rooms

Air volume flow Q:

$$Q = v \times q \times s \times n \times I_{\text{gas}} \times \frac{C}{1000\text{ Ah}}$$

- v = dilution factor = 96 % air/4 % $\text{H}_2 = 24$
- q = quantity of hydrogen generated = $0.42 \cdot 10^{-3}\text{ m}^3/\text{Ah}$
- s = safety factor = 5
- n = number of cells
- I_{gas} = current per 100 Ah
- C = nominal capacity of the battery

Sum of factors:

$$v \times q \times s = 0.05$$

$$Q = 0.05 \times n \times I_{\text{gas}} \times \frac{C}{1000\text{ Ah}} \quad \text{with } Q \text{ in } \text{m}^3/\text{h}, I_{\text{gas}} \text{ in A}$$

$$I_{\text{gas}} = I_{\text{float}} \text{ resp. } I_{\text{boost}} \times f_g \times f_s$$

Parameter	Lead-acid batteries sealed cells
f_g : Gas emissions factor	0.2
f_s : Safety factor for gas emissions (includes 10 % faulty cells and aging)	5
U_{float} : Float charge voltage, V/cell	2.27
I_{float} : Typical float charge current, mA per Ah	1
I_{gas} : Current (float charge), mA per AH (used only for calculating the air volume flow for float charge)	1
U_{boost} : Boost charge voltage, V/cell	2.40
I_{boost} : Typical boost charge current, mA per Ah	8
I_{gas} : Current (boost charge), mA per Ah (used only for calculating the air volume flow for boost charge)	8

Tab. 5-2: Recommended current values (Extract from the IEC 62485-2)

If designing the ventilation in battery rooms, depending on the structural conditions, either “natural ventilation” or “technical ventilation” can be used.

Observe the following points:

Natural ventilation:

- Intake and exhaust openings required
- Minimum cross-section (free opening in wall) (A in cm^2 , Q in m^3/h) (given that: $v_{\text{air}} = 0.1\text{ m/s}$)
- Increased ventilation through chimney effect (air routing)
- Exhaust released outside (not into air-conditioning systems or surrounding rooms)

Technical ventilation:

- Increased ventilation using fan (generally extractor fans)
- Air flow rate according to air volume flow Q
- Air drawn in must be clean
- If large amounts of gas are released during charging, continued ventilation is required for 1 h after charging is complete
- For multiple batteries in one room: required air flow = $\sum Q$
- Avoid a ventilation short circuit by ensuring that there is sufficient distance between the intake and exhaust opening

In case of a technical (forced) ventilation the charger shall be interlocked with the ventilation system or an alarm shall be actuated to secure the required air flow for the selected charging mode.



Another sample calculation for battery room ventilation is available in Required ventilation for hydrogen generated by batteries, Chap. 10, "Required ventilation for hydrogen generated by batteries".

5.3 Conducting an open-circuit voltage measurement



Before installing the batteries, conduct an open-circuit voltage measurement of the individual cells or monobloc batteries to determine their state of charge and to make sure that they are functioning properly. Fully-charged cells with an electrolyte temperature of 20 °C should have an open-circuit voltage as listed in Tab. 5-3. The open-circuit voltages of the individual cells of a battery must not differ more than 0.02 V from one another.

Type of cell/monobloc battery	Open-circuit voltage
grid power VR L (OPzV 2 V cell)	2.080 V ... 2.140 V/c
grid power VR L (OPzV bloc)	2.080 V ... 2.140 V/c
net.power 12 V 100 und 12 V 150	2.080 V ... 2.140 V/c
net.power 12 V 92 und 170 Ah	2.100 V ... 2.160 V/c
grid power VR M (power.com SB)	2.080 V ... 2.140 V/c
power.com HC	2.080 V ... 2.140 V/c
sun power VR L (OPzV solar.power/OPzV bloc solar.power)	2.080 V ... 2.140 V/c
sun power VR M (solar.bloc)	2.080 V ... 2.140 V/c
power.com XC	2.100 V ... 2.160 V/c
grid power VR X/grid power VR X FT	2.120 V ... 2.180 V/c
grid Xtreme VR	2.120 V ... 2.180 V/c
power.com SA	2.080 V ... 2.140 V/c
power.com H.C	2.180 V ... 2,210 V/c

Tab. 5-3: Open-circuit voltages for different cells/block batteries

The following open-circuit voltage deviations are acceptable for monobloc batteries:

- 4 V monobloc 0.03 V/block
- 6 V monobloc 0.04 V/block
- 12 V monobloc batteries 0.05 V/block



High temperatures decrease the open-circuit voltage while lower temperatures increase it. A deviation of 15 K from the nominal temperature changes the open-circuit voltage by 0.01 V/cell. **Please consult your local HOPPECKE representative regarding larger deviations.**

5.4 Installation tools and equipment

The batteries are delivered on pallets and the required accessories are located in separate packaging units. Observe all information from the previous sections.



Danger!

For the installation, you will require your personal safety equipment, protective clothing, safety tools and other equipment as described in Chap. 2.2.

Equipment	Available?
Lifting conveyor (forklift truck, lift truck or small mobile crane or similar device to aid in battery installation)	
Chalk line and chalk (optional)	
Plastic spirit level (optional)	
Torque wrench	
Backing elements (max. 6 mm) for installing the racks (cabinets) (optional)	
Ratchet set (optional)	
Wrench and ring wrench set with insulated grips	
Screwdriver with insulated grip	
Paper towels or cloths (made of cotton; do not use cloths made out of synthetic fibers as there is a risk of static charging), moisturised with water	
Brushes with hard plastic bristles (optional)	
Plastic measuring tape	
Safety equipment and protective clothing	
Aeronix® battery terminal grease (only for cells/blocs with exposed lead on post terminals)	
Insulating mats for covering conductive parts	

Tab. 5-4: Equipment for installation

5.5 Rack installation



We recommend that batteries are properly installed in HOPPECKE battery racks or HOPPECKE battery cabinets. The use of other operator-specific solutions may render the warranty for the batteries null and void. HOPPECKE produces different types of racks. For installation information, see the separate documentation included with each rack.



Danger!

Observe the special requirements and regulations when installing battery racks in seismic areas!



Danger!

The installation location must fulfill the conditions described in Chap. 5.1. Comply with the minimum distances listed in Tab. 5-1.



Fig. 5-2: Step rack (left) and tier rack (right)

1. If the installation drawing is available, mark the outlines of the racks on the installation surface using chalk.
2. The installation surface must be level and rigid. If backing elements are used, make sure that the thickness does not exceed 6 mm.
3. Carefully set up the racks and arrange them horizontally.
4. The distances of the support profiles must correspond to the dimensions of the cell or monobloc battery.
5. Check rack stability and ensure that all screwed and clamp connectors are firmly secured.
6. If necessary, ground the racks or rack parts.



Attention!

If using wooden racks: you must fit a flexible connector between each rack joint.

5.6 Cabinet installation



Alternatively, you may choose to install the batteries in HOPPECKE cabinets. The cabinets can be delivered with batteries already installed or battery installation can take place onsite. HOPPECKE provides different types of cabinets.



Danger!

The installation location must fulfill the conditions described in *Chap. 5.1*. Comply with the minimum distances listed in *Tab. 5-1*.



Fig. 5-3: Battery cabinet



If installing block batteries with L-connectors you should consider, that L-connectors have to be mounted before positioning the battery block in the battery cabinet.

Note: The L-connectors are not intended for high current applications (e. g. UPS). Please contact your local HOPPECKE representative in case of questions.

5.7 Handling the batteries

Be very careful when lifting and moving the batteries as a falling battery could cause personal injury or material damage. Always wear protective shoes and safety goggles.

Install the battery in accordance with VDE 0510 Part 2: 2001-12 (in accordance with IEC 62485-2).

For example, you must cover conductive parts using insulating mats.

Make sure that all terminals are covered with insulating caps.

5.8 General information on connecting the batteries



Attention!

If connecting the batteries, always establish the serial connections first followed by the parallel connection. Do not reverse this procedure.

Before connecting, check to make sure that the batteries have the correct polarity.



To establish the serial connection, arrange the batteries so that the positive terminal of one battery is positioned as near as possible to the negative terminal of the next battery.

If sealed stationary batteries are connected in parallel, observe the following:

1. Only battery strings with the same length and voltage may be connected with one another. Cross connecting the individual strings between the cells should be avoided because strings could be very long. Cross connections mask bad cells and blocks and could cause individual battery strings to overload.
2. Only batteries of the same type and same state of charge should be connected (same battery type, plate size and plate design).
3. The environmental conditions should be the same for each string connected in parallel. In particular, avoid temperature discrepancies between the individual strings/batteries.
4. In order to ensure consistent current distribution, make sure that the connectors and end connections are set up so that the individual supply lines connected to the consumer have the same electrical resistance ratio.
5. The commissioning date of the batteries should be the same (batteries of the same age, identical storage time and same state of charge).
6. Depending on the application and system voltage, the number of battery strings connected in parallel must be limited as follows:
 - a.) Cyclic application:
Battery size up to 48V: max. 4-6 strings (max. 10 strings - grid | Xtreme VR)
Battery size > 48V: max. 2 strings (max. 4 strings - grid | Xtreme VR)
The reason for this is that the charge factor in cyclic applications is usually not very high and the risk of insufficient charge increases if the recommended maximum number of parallel battery strings is exceeded.
 - b.) Stand-by parallel operation:
Battery size up to 60V: max. 8-10 strings
Battery size > 60V: max. 6 strings

In special cases, an agreement with Hoppecke is necessary.

If the installation does not comply with all of the above mentioned guidelines, you have to charge each string separately and connect them in parallel afterwards.


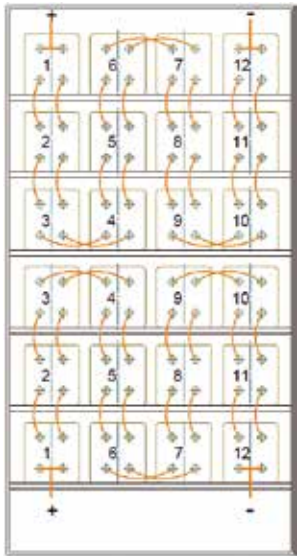


Fig. 5-12: Example of a horizontal arrangement of the batteries with OPzV-cells in a battery cabinet

In general, connect the batteries using the shortest possible cables. Normally, cells are connected in series with alternating polarity, resulting in the shortest possible connector length. Batteries of type range OPzV and sun | power VR L can also be mounted horizontally in racks or cabinets. These are optional variants for horizontal operation. These variants need to be ordered extra. Fig. 5-12 depicts an example for connection of horizontal oriented battery cells.




The lid of the battery cells must not rest on parts of the battery rack or cabinet. The cells must be inserted very carefully into the battery cabinet to avoid damaging the connection between the lid and the container. Starting with the 1500 grid | power VR L (OPzV), the cell should only be placed in the toast position for horizontal application (plates are upright), see figure below. In other cases please contact Hoppecke. The weak point is being shown by the picture below.

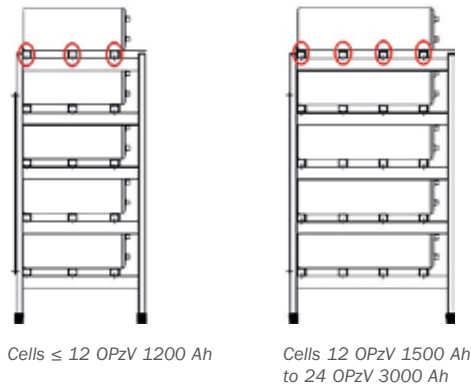

Correct, the weak point is not on the cabinet ledge, see the highlighted area marking



Wrong, the weak point is on the cabinet ledge, see the highlighted area marking

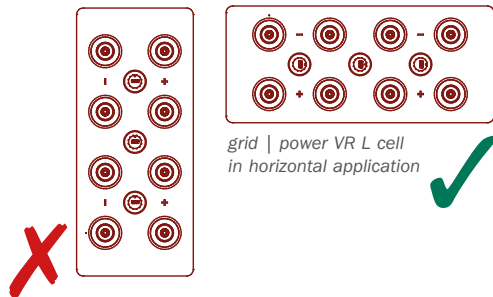

5.9 Putting the cells/blocks into the racks

1. Apply some soft soap to the profiles of the rack so that the batteries can be adjusted sideways more easily once they have been placed onto the rack.



Fig. 5-13: Greased support profiles

2. Position the batteries one after another into the racks so that they are angled and level with the correct polarity. Remove all transportation and hoisting equipment.



For large batteries, it is required that you begin installation in the center of the rack. When using tier racks, install the batteries on the bottom rack first.



Attention!

When handling the batteries, observe the instructions in Chap. 5.7. Place the batteries carefully onto the profiles of the rack, otherwise the battery casing could be damaged. When placing the batteries on the rack, do not allow the batteries to knock up against one another. This could destroy the batteries!



Danger!

The battery connection terminals + and – must under no circumstance be short-circuited. This also applies also to the + and – pole of the entire battery string. Be very careful when using step racks.



Attention!

3. Slide the blocks (or cells) to either side until the distance between the batteries is approx. 10 mm (Fig. 5-14). If connectors are used, these determine the distance between the batteries. When sliding the batteries sideways in the racks, do not push them at the middle; instead, push them at the corners as these are stronger. Push batteries using your hands only; never use a tool.



Fig. 5-14: 10 mm clearance between the batteries

4. Final step: Count all cells/blocks and check for completeness.



Information: AGM 2 V cell installation in horizontal position:



HOPPECKE recommends strongly the “pancake” (electrode plates lie flat) position for the horizontal installation of 2 V cells.

Do not put the cell/battery edge on any surface directly in order to avoid the damage of the welding edge.



Danger!

During the moving of the cells into stack, avoid damages by positioning the cells/batteries exactly according to the height of stack bottom, using a lifting device and eventually greasing the surface in order to have easier handling.



Remark to the connection of cells/batteries:

After installation of all single cells/into the racks please connect all cells with the delivered connectors/screws in accordance to the installation drawing (if available). See example below:



In case of a seismic rack please install the protection steel bar in front of the cells after complete wiring. General information on connecting the batteries, see chapter 5.8.

5.10 Connecting the batteries

The batteries are in their final position and can now be connected.

5.10.1 Connection terminals



The battery terminals of the types sun | power VR M 12 V 58 to 12 V 90 have been greased at the factory using Aeronix® battery terminal grease. Inspect each terminal for visible damage or oxidation. If necessary you should clean the terminal by using a brush (with hard plastic bristles). Regrease by using the above mentioned terminal grease. Other sealed lead acid battery types don't need to be greased because the terminals are rubber molded. In the case of the plastic-coated poles, the brass/copper surface of the pole insert should also be cleaned before the connectors are installed. This applies in particular to visible oxidation of the pole insert.

5.10.2 Type of connection cable

The battery system that you received is designed to produce a specified amount of power (kW) or current (A) at a particular voltage for a certain period of time (standby time).

You should be familiar with these parameters (U, kW, A). If this is not the case, please contact your local HOPPECKE representative.



The battery system was designed so that the electrical energy is available at the battery terminals. Limit voltage drop between the battery terminals and electrical loads to an absolute minimum. If the voltage drop is too large, the backup time of the battery system may be reduced. Observe the following information:

1. Keep the cable length between the batteries and the charging rectifier/USV as short as possible.
2. The cable cross-section should be calculated so that voltage drop is negligible even at a high current flow. Use the cross-section of the cable provided to calculate the voltage drop at the nominal current. If in doubt, use cable with a cross-section that is one size larger.



Danger!

The connection cable must be short-circuit proof or double-wall insulated. That means:

- The insulation strength of the cable is higher than the max. system voltage
- There is a distance of at least 100 mm between wiring and electrically conductive parts
- Connectors must be furnished with additional insulation
- Avoid mechanical stress on the cell/battery terminals. Protect cables with large cross-sections using cable ties and cable clamps



The connection cables between the main connection terminals and the charging rectifier or UPS should be flexible conductors.

5.10.3 Clamping batteries using battery connectors



There are screwed row, step and tier connectors (see Fig. 5-15). Row connectors are used to connect the individual cells/monobloc batteries, step connectors are used to connect the individual steps to one another (for use with step racks) and the tier connectors are used to connect the tiers (for use with tier racks).



Fig. 5-15: Using row connectors and step connectors




Attention!

Row, step, tier and end connectors are designed as screwed connectors. After loosening a connection, the assembly screws must always be replaced.

5.10.4 Installing the screwed connectors



In very rare cases, the post sealing may not have the correct color (blue/minus and red/plus). In this case the post sealing has to be exchanged by a new one. The best approach is to screw the screws symmetrically into the upper surface of the post sealing and pull them out by applying a lot of force on both sides. The new post sealing should be smeared with a little bit of silicone oil and pushed into the pole tub within the cover until the clips of the pole bushing snap into place.

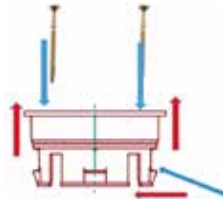

1. The batteries are connected using the insulated row connectors (Fig. 5-16). When establishing the serial connection, the batteries are arranged so that the negative terminal of one battery is connected to the positive terminal of the next battery until the entire system has reached the necessary voltage.



Attention!

Make sure that you do not cause mechanical damage to the terminals.

2. Attach the connectors as shown in Fig. 5-15. First attach the screws by hand only so that you can make final adjustments to the cells and connectors.
3. Tighten the screws using a torque wrench. The recommended torque is 20 Nm \pm 1 Nm.



Attention!

Torque for the product range power.com H.C:

- M5: 2 - 3 Nm
- M6: 4 - 5.4 Nm
- M8: 11 - 14 Nm

Torque for the product range grid | Xtreme vr: 15 Nm



Attention!

It is very important to tighten screws thoroughly as a loose connection can become very hot and result in ignition or explosion. Screws are approved for single use only!



Attention!

For tightening the screws of the product grid | power VR L (OPzV bloc), please use wrench size 20 mm.

4. If necessary, fit the connectors and end terminals (connection plates) with insulating covers.



Fig. 5-16: Screwed connector installation

5.10.5 Clamping connection plates onto the batteries



There are a total of 11 different types of connection plates (see Fig. 5-15). Connection plates are always used when wires must be connected to cells with multiple battery terminals.



Attention!

We strongly recommend that you use original HOPPECKE connection plates when connecting wires to cells with multiple battery terminal pairs. Using other solutions may lead to overheating, risk of fire and increased electrical contact resistance!

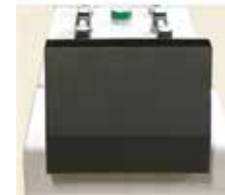


Fig. 5-17: Installing the end terminals (connection plates)

Installation of standard connection plates

Screw the connection brackets onto the end terminals of the battery (see Fig. 5-17).



Attention!

Make sure that you do not cause mechanical damage to the terminals.

2. First attach the screws by hand only so that you can make final adjustments to the cells, connection brackets and connection plates. Fix the connection plate to the connection bracket of the battery with a torque of 20 Nm.
3. Afterwards tighten the pole screws using a torque wrench. The recommended torque is 20 Nm \pm 1 Nm.



Attention!

It is very important to tighten screws thoroughly as a loose connection can become very hot and result in ignition or explosion.

Torque for the product range power.com H.C:

- M5: 2 - 3 Nm
- M6: 4 - 5.4 Nm
- M8: 11 - 14 Nm



Attention!

Torque for the product range grid | Xtreme vr: 15 Nm

5.11 Connect the battery system to the DC power supply



Attention!

Make sure that all installation work has been performed properly before connecting the battery system to the charging rectifier or UPS.

1. Measure the total voltage (target value = sum of open-circuit voltages of the individual cells or monobloc batteries).
2. If necessary: label the cells or monobloc batteries visibly with continuous numbers (from the positive terminal to the negative terminal of the battery). HOPPECKE includes number stickers in your shipment.
3. Attach polarity labels for the battery connections.
4. Complete the identification plate in this documentation (see Chap. 1.2).
5. Attach safety marking signs (these include: "Danger: batteries", "Smoking prohibited" and, for battery voltages > 60 V, "Dangerous voltage"). Attach further marking signs according to local requirements.
6. Attach the safety notices (see Chap. 0).
7. If necessary: Clean the batteries, the racks and the installation room.



Danger!

Never clean batteries using feather dusters or dry towels. Danger of electrostatic charging and gas explosion. We recommend cleaning the batteries using damp cotton cloths or paper towels.

8. Connect the battery system to the charging rectifier/UPS using the end connections ("plus to plus" and "minus to minus") and proceed as described in Chap. 5.12.



The connection cables between the end connections of the battery and the charging rectifier or UPS should be flexible conductors. Inflexible wires could transfer vibrations, which could loosen the connection under certain circumstances. The cables must be supported so that no mechanical load can be transferred to the connection terminals (cable trays, cable ducts, cable clamps).

5.12 Commissioning charge (initial charge)



Normally, by the time of installation, batteries are no longer fully charged. This applies especially to batteries that have been in storage for a long period of time (see Chap. 4). In order to charge the cells to the optimum level as quickly as possible, you must first perform an initial charge. The initial charge (time-restricted) is a "boost charge".



Attention!

product range power.com H.C

This battery should be cycled min. 2 to 3 times in order to reach the nominal capacity. Hoppecke recommends C5 - C10 discharge load and recharge profile according to 5.12.1. After commissioning the battery according to this recommended profile, it can be used normally.

1. Familiarize yourself with the maximum voltage that the charge rectifier can deliver without damaging the peripherals.
2. Divide this maximum value by the number of battery cells (not batteries) connected in series. This is the maximum cell voltage for the initial charge.
3. Set the voltage so that average cell voltages are at a max. of 2.4 V per cell. The initial charge can take up to 48 hours.



It is important for this initial charge to be carried out completely. Avoid interruptions if at all possible. Log the commissioning in the commissioning report (see Inspection record).

4. During commissioning, measure the cell voltage of the pilot cells and after commissioning, measure the cell voltage and surface temperature of each cell and log this data in the commissioning report along with the time.



Danger!

The surface temperature must not exceed 55 °C. If necessary, the charge operation must be interrupted, till the temperature drops below 45 °C.

5.12.1 Commissioning charge with constant voltage (IU characteristic curve)

- A charge voltage of max. 2.4 V per cell is required
- The max. charge current should not be higher than 20 A per 100 Ah C10
- If the max. temperature of 55 °C is exceeded, the charge operation must be interrupted
- You must temporarily switch to float charging to allow the temperature to drop
- The entire time of the commissioning (IU all over) should be 24 h

5.12.2 Extended commissioning charge



Extended storage or climatic influences (humidity, temperature fluctuations) reduce the charging state of the cells. This makes an extended commissioning charge necessary. The extended commissioning should not be done if the storage time (chapter 4) of the batteries is overstepped. The excess of the storage time means that the desulphatation charging has to be done, which is described in the chapter 4.2.

Conduct the extended commissioning charge according to the following procedure:

1. Charge at 10 to 15 A per 100 Ah C₁₀ until 2,4 V/cell is achieved (approx. 3 to 5 hours).
2. Charge at 2,4 V/cell until charging current has reached 1 A per 100 Ah.
3. Charge with 1 A per 100 Ah for 4 hours (cell voltage will exceed 2,4 V/cell).

6 Battery operation



DIN VDE 0510 Part 1 and IEC 62485-2 apply for the operation of stationary battery systems.

Each battery is subject to a natural electro-chemical aging process, which causes the reduction of the metallic lead within the battery (corrosion). The progress of the aging process and also the service life of the battery depend significantly on the operating temperature.



Attention!

The recommended operating temperature for lead-acid batteries is between 10 °C and 30 °C. Technical data is valid for the nominal temperature of 20 °C. The ideal operating temperature range is 20 °C ± 5 K. Higher temperatures shorten the service life of the battery. Lower temperatures decrease battery capacity. Exceeding the limit temperature of 55 °C is not permissible. Avoid operating at temperatures in excess of 45 °C for long periods of time.

The natural aging process and thus the service life expectation play an important role especially in high current applications. A high current application is an application with currents and discharge rates ≤ C_{0.5}. Discharging with high currents results in disproportionately more heat, which may lead to a thermal overload of the corroded metallic conductor. From a certain level of the aging progress the reduced cross sections are not able to conduct the designed maximum permitted current for the defined period. In an extreme case this can result in an unexpected battery failure.



Attention!

Permitted operating temperature range VRLA batteries: - 20 °C to + 40 °C



Permissible operating temperature range grid | Xtreme vr batteries: - 40 °C to + 55 °C



Attention!

The capacity test helps to check the efficiency and safety of the batteries and can thus avoid an unexpected battery failure. Please note, that during the capacity test the load current must correspond to the maximum permitted current for which the battery is designed. Regular review of the batteries in compliance with specifications defined in *Chap. 9* (Testing the battery system) generally eliminates the risk of an unexpected battery failure. We recommend performing the capacity test in accordance with *Chap. 9* periodically, but at least once a year. In light of past experience during the first 3 years of the operating life of the batteries the capacity test can be omitted.



Attention!

Additional tools (like BMS) which are influencing the charging regime, can be only used after the consultation with HOPPECKE.

6.1 Discharging



Attention!

Never allow the final discharge voltage of the battery to drop below the voltage corresponding to the discharge current. Unless the manufacturer has specified otherwise, no more than the nominal capacity is to be discharged. Immediately after discharge (including partial discharge), charge the battery completely.

6.2 Charging – general

Depending on how the batteries are used, charging is to be carried out in the operating modes described in *Chap. 6.2.1* to *Chap. 6.2.4*.



Apply the charging procedure with limit values in accordance with DIN 41773 (IU characteristic curve). The sun products are daily discharged and for this reason the charging profile of these products is different compared to the stand by application. The charging parameter for the cyclic applications (sun products) are listed in the *chapter 7*.



Attention!

Superimposed alternating currents

Depending on the charger type and charging characteristic curve, alternating currents flow through the battery during charging and are superimposed onto the charging direct current. These superimposed alternating currents and the reaction of the loads lead to additional heating of the battery or batteries and create a cyclical strain on the electrodes. This might result in premature aging of the battery. During the Boost charging the alternating current should not be higher than 5 A/100 Ah.



Attention!

In order to achieve the optimum service life for sealed lead-acid batteries on float charge, a maximum effective value of the alternating current of 1 A per 100 Ah nominal capacity is recommended.



Attention!

Temperature-related adjustment of the charge voltage

The temperature voltage compensation is mandatory if the application temperature deviates from 20 °C. HOPPECKE recommends 3 mV/K (grid | Xtreme VR: 2,5 mV/K). If the inverter can not realize the compensation (technically), the border area would be 15 °C to 25 °C (shown by the figure 6-1). Nevertheless the compensation should be realized.

Temperature [°C]	- 10	0	10	20	30	40
Charge voltage [V/cell]	2.34	2.31	2.28	2.25	2.22	2.19

Tab. 6-1: Corrected charge voltage in relation to charge temperature for battery types with 2.25 V/cell float charge at T_{nom}

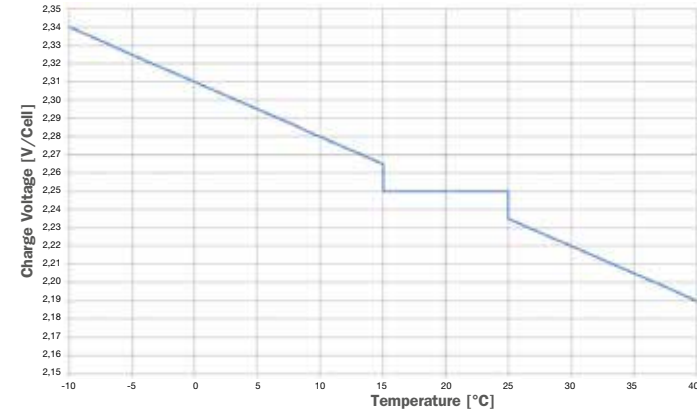


Fig. 6-1: Temperature related float charge voltage adjustment



Attention!

Temperature charging voltage compensation for products with an extended operating temperature range (grid | Xtreme VR)

The temperature compensation of -2,5mV/(cell*K) is limited to +40 °C/+ 104 °F, since the compensated charging voltage increasingly approaches the natural open circuit voltage of the battery from this temperature and therefore there is no sufficient overvoltage available to keep the battery in a fully charged condition.

In the extended temperature range of 40 to 55 °C, the batteries of the grid | Xtreme VR shall therefore be operated with a constant float charge voltage of 2.25 V/cell.



Attention!

Maximum charge currents

Up to 2.4 V/cell the battery is able to absorb the maximum current the battery charger provides. Using the IU-characteristic according to the DIN 41773 a charging current of 5 A to 20 A per 100 Ah rated capacity (C_{10}) is recommended.



Recommended charging current with grid | Xtreme VR batteries: 5 to 40 A per 100 Ah

6.2.1 Standby parallel operation

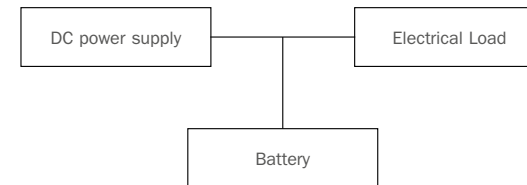


Fig. 6-2: Standby parallel operation

The following is characteristic for this operating mode:

- Consumers, direct current source and battery are connected in parallel
- The charge voltage is the operating voltage of the battery and the system voltage at the same time
- The direct current source (charging rectifier) is capable of supplying the maximum load current and the battery charge current at any time
- The battery only supplies current when the direct current source fails
- The charge voltage should be set at (see Tab. 6-2) x number of cells in series (measured at the battery's terminals)
- To reduce the recharging time, a charging stage can be applied in which the charge voltage is max 2,40 V x number of cells (standby parallel operation with recharging stage)
- Automatic changeover to the charge voltage of (see Tab. 6-2) x number of cells in series occurs after charging

Battery type	Float charge voltage
grid power VR L (OPzV)	2.25 ± 1 % V/cell
grid power VR L (OPzV bloc)	2.25 ± 1 % V/cell
net.power 12 V 100 und 150 Ah	2.25 ± 1 % V/cell
net.power 12 V 92 und 170 Ah	2.27 ± 1 % V/cell
power.com XC	2.27 ± 1 % V/cell
grid power VR M (power.com SB)	2.25 ± 1 % V/cell
power.com HC	2.25 ± 1 % V/cell
sun power VR L (OPzV solar.power/OPzV bloc solar.power)	2.25 ± 1 % V/cell
sun power VR M (solar.bloc)	2.25 ± 1 % V/cell
grid power VR x/grid power VR X FT	2.28 ± 1 % V/cell
grid Xtreme VR	2.3 ± 1 % V/cell
power.com SA	2.25 ± 1 % V/cell
power.com H.C	2.27 ± 1 % V/cell

Tab. 6-2: Float charge voltage adjustment in standby parallel operation

6.2.2 Floating operation

The following is characteristic for this operating mode:

- Consumers, direct current source and battery are connected in parallel
- The charge voltage is the operating voltage of the battery and the system voltage at the same time
- The direct current source is not able to supply the maximum load current at all times. The load current intermittently exceeds the nominal current of the direct current source. During this period the battery supplies power
- The battery is not fully charged at all times
- Therefore, depending on the number of discharges, the charge voltage must be set to approx. (2.27 to 2.30 V) x the number of cells connected in series

6.2.3 Switch mode operation (charge/discharge operation)

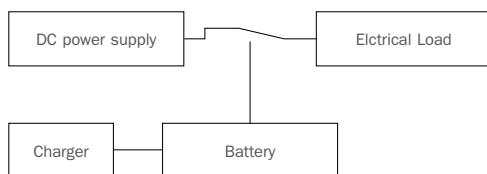


Fig. 6-3: Switch mode operation

The following is characteristic for this operating mode:

- When charging, the battery is separated from the consumer
- The max. charge voltage of the battery is 2.4 V/cell
- The charging process must be monitored
- At 2.4 V/cell, if the charge current has dropped to 1.5 A per 100 Ah nominal capacity, you must switch to float charging as described in Chap. 6.2.4
- The battery may be connected to the consumer if required

6.2.4 Float charging

Float charging is used to keep the battery or batteries in a fully charged state and corresponds to a large extent to the charge type, mentioned in chapter 6.2.1.



Use a charger that complies with the specifications described in DIN 41773 (IU characteristic curve). Set the voltage so that average voltage is 2.25 V ± 1 % (2.27 V ± 1 % for net.power 12 V 92/170 Ah, 2,3 V ± 1 % for grid | Xtreme VR and power.com XC and 2.28 V ± 1 % for grid | power VR x).

Example: Nominal battery voltage: 60 V, float charge voltage of charging device is 30 x float charge voltage per cell. E. g. 30 x cells OPzV result in 30 x 2.25 V = 67.5 V ± 1 % (=max. 68.18 V/min. 66.83 V).

6.2.5 Equalizing charge (correction charge)

Under normal circumstances equalizing charges are not required.

If there are unacceptably large discrepancies between the cell voltages of the individual cells at float charge (see Tab. 6-3), an equalizing charge must be performed.

Equalizing charges are necessary after exhaustive discharges, after inadequate charging, if the cells have been held at non-uniform temperatures for long periods of time or if the voltage value of one or more cells has dropped below the critical threshold as specified in Tab. 6-3 during operation.

Type	Float charge voltage			
OPzV, power.bloc OPzV, net.power 12 V 100 and 12 V 150 Ah, grid power VR M (power.com SB), power.com HC, power.com SA, sun power VR L (OPzV solar.power/OPzV bloc solar.power), sun power VR M (solar.bloc)	2.25 V/cell ± 1 %			
net.power 12 V 92 and 170 Ah, power.com XC	2.27 V/cell ± 1 %			
grid power VR x/grid power VR X FT	2.28 V/cell ± 1 %			
grid Xtreme VR	2.3 V/cell ± 1 %			
Voltage per unit	2 V	4 V	6 V	12 V
Tolerance float charge voltage for single cells (deviation from average float charge voltage)	- 0.10 V/+ 0.20 V	- 0.14 V/+ 0.28 V	- 0.17 V/+ 0.35 V	- 0.25 V/+ 0.50 V

Tab. 6-3: Float charge voltage

Example for OPzV cells: Float charge voltage max. = 2.45 V/cell and min. 2.15 V/cell (at average float charge voltage of 2.25 V/cell).



Attention!

As the max. permitted load voltage might be exceeded, it must be clarified in advance whether the loads can be disconnected for the duration of the equalizing charge.

Perform the equalizing charge as follows:

1. Charging with IU characteristic curve up to max. voltage $U = 2.4 \text{ V/cell}$ for up to 48 hours. The charge current should be 20 A per 100 Ah nominal capacity.
2. If the maximum temperature exceeds $45 \text{ }^\circ\text{C}$, terminate the charging process or switch to float charge to allow the temperature to drop.
3. The end of the equalization charge is reached when the cell voltages no longer increase within 2 hours.



Required process for charging the batteries by achievement of max. storage duration:
Refer to *Chap. 4.2*.



Note that float charge voltages of lead-acid batteries with electrolytes fixed in gel can fluctuate significantly within the first four years after initial commissioning. The voltages range in an area between ca. 2.12 V/cells and $2.5 \text{ V/cell} \pm 1\%$. The black lines in *fig. 6-4* depict this area of float charge voltage for the first five years of battery service life. The exact development of the voltage values can not be determined in advance. *Fig. 6-4* depicts rather the trend of this typical behaviour and related reasonable alarm thresholds.

Background: The scattering of float charge voltages of gel batteries is a normal phenomenon and has no negative impact on the efficiency or capacity of the battery cells. This voltage scattering leads to a balanced internal gas recombination within the battery string with the result of lower voltage differences and improved cell-internal oxygen and hydrogen recombination rates. This process can neither be accelerated through cyclization of the battery, nor by raised charge voltages. The normal equalizing charge voltage leads optimally to a homogeneous gel structure and a high efficiency of the battery over the entire service life.

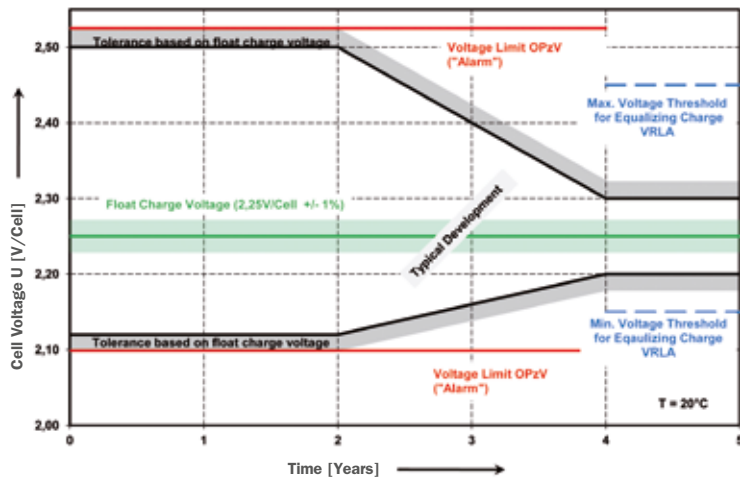


Fig. 6-4: Trend of float charge voltage over service life of gel batteries.

7 Settings for charging HOPPECKE sun | power vr L (OPzV solar.power/ OPzV bloc solar.power) and sun | power vr M (solar.bloc) batteries

This chapter contains instructions for charging of HOPPECKE sun | power vr L (OPzV solar.power/ OPzV bloc solar.power) battery cells and battery blocks in solar applications.

7.1 Charge and discharge parameters

Parameter	sun power vr L OPzV solar.power	sun power vr M solar.bloc
battery charge		
recommended charging current	6 x I10	6 x I10
standard charge (regular operating cycles)		
characteristic	IU (with subsequent switchover to float)	IU (with subsequent switchover to float)
max. current (consider the fuses and cable lengths)	6 x I10	6 x I10
max. voltage absorption phase	2.4 - 2.5 V/cell	2.4 V/cell
recommended absorption time	180 min	180 min
absorption time full charge/charging factor	6 h/charging factor 1.03 The absorption time (or the last charging phase) can be shorter or longer than the 6 h depending on charging factor. The keeping of the charging factor is rather recommended.	6 h/charging factor 1.02 The absorption time (or the last charging phase) can be shorter or longer than the 6 h depending on charging factor. The keeping of the charging factor is rather recommended.
frequency/cycle, based on time period (full charge)	14 days	14 days
float charge		
voltage	2.25 V/cell $\pm 1\%$	2.25 V/cell $\pm 1\%$
temperature correction	$T > 20 \text{ }^\circ\text{C} - 3 \text{ mV/K}$ $T < 20 \text{ }^\circ\text{C} + 3 \text{ mV/K}$	$T > 20 \text{ }^\circ\text{C} - 3 \text{ mV/K}$ $T < 20 \text{ }^\circ\text{C} + 3 \text{ mV/K}$
equalization charge (frequency depending on which of the following two criteria occurs first)		
frequency/cycle, based on capacity throughput	10 x Cn	10 x Cn
frequency/cycle, based on time period	40 days	40 days
characteristic	IU/IU1a (with subsequent switchover to float)	IU/IU1a (with subsequent switchover to float)
comment to the characteristic	At IU1a characteristic: current in la phase max. 0.8 A/100 Ah C_{10} for 2 to 4 h	At IU1a characteristic: current in la phase max. 0.8 A/100 Ah C_{10} for 2 bis 4 h

max. current (note the fuses and cable lengths)	6 x I10	6 x I10
max. voltage absorption phase	2.55 V/c at IU-characteristic 2.4 V/c at IUa-characteristic	2.5 V/c
absorption time/charging factor	6 h/charging factor 1.07 The absorption time (or the last charging phase) can be shorter or longer than the 6 h depending on charging factor. The keeping of the charging factor is rather recommended.	4 h/charging factor 1.04 The absorption time (or the last charging phase) can be shorter or longer than the 4 h depending on charging factor. The keeping of the charging factor is rather recommended.
battery discharge		
discharge characteristic	refer to the data sheet and project data	refer to the data sheet and project data
recommended (DOD) cycle operation	50 %	50 %
max. depth of discharge (DOD), immediate recharge is necessary	80 %	80 %
max. discharge	limited by battery fuse and cable	limited by battery fuse and cable
proposal for characteristic for deep discharge protection [U=f(I)] comment: deep discharge protection by switching off relating to a constant voltage value is forbidden!	2.01 V/c at $I \leq 0.16 \times I10$ 1.81 V/c at $I \geq 4 \times I10$ linear interpolation at $0.16 \times I10 < I < 4 \times I10$	2.01 V/c at $I \leq 0.16 \times I10$ 1.90 V/c at $I \geq 4 \times I10$ linear interpolation at $0.16 \times I10 < I < 4 \times I10$

Tab. 7-1: Charge and discharge parameters

7.2 Alternating currents

Depending on the charging equipment, its specification and its characteristics, superimposed alternating currents may contribute to battery charging current. Alternating currents and the corresponding reaction by the connected electrical loads may lead to an additional battery temperature increase, and – consequently – to a shortened battery service life as a result of stressed electrodes (micro cycling). The alternating current must not exceed 1 A (RMS)/100 Ah nominal capacity. During the Boost charging the alternating current should not be higher than 5 A/100 Ah.

7.3 Temperature influence on battery performance and service life

7.3.1 Temperature influence on battery capacity

Battery capacity depends significantly on ambient temperature. Lead acid batteries loose capacity with decreasing temperature and vice versa, as shown in fig. 7-6. This should be considered when sizing the battery.

Temperature range for sun | power vR L (OPzV solar.power/OPzV bloc solar.power) batteries:

Possible temperature range: - 20 °C to 45 °C
Recommend temperature range: 15 °C to 35 °C

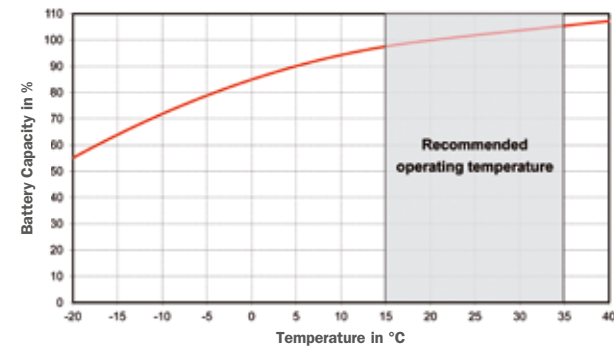


Fig. 7-6: sun | power vR L (OPzV solar.power/OPzV bloc solar.power): Dependency of battery capacity on temperature

7.3.2 Temperature influence on battery design life

As corrosion processes in lead acid batteries are significantly depending on battery temperature, the battery design life is directly related to the ambient temperature.

As rule of thumb it can be stated that the speed of corrosion doubles per 10 K increase (rule by Arrhenius). Thus battery design life will be halved in case the temperature rises by 10 K.

The following graph (refer to fig. 7-7) shows this relationship. The diagram depicts operation in float charge mode. Additionally, the endurance in cycles has to be taken into account.

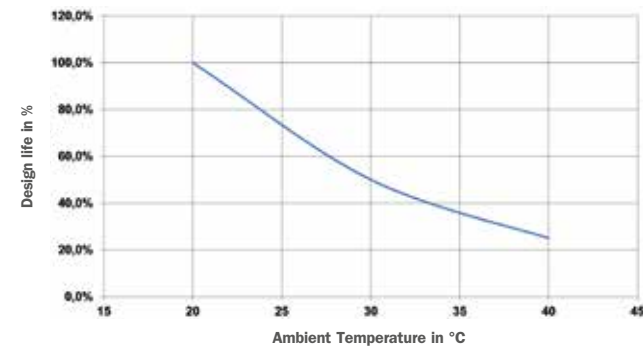


Fig. 7-7: Service life of sun | power vR L (OPzV solar.power) cell as a function of ambient temperature (standby application in float charge operation with 2.25 V/cell)

7.4 Influence of cycling on battery behavior

7.4.1 Endurance in cycles depending on depth of discharge

The endurance in cycles is defined as number of discharging and charging cycles until the actual remaining battery capacity drops below 80 % of the nominal capacity (C_{10}). The endurance in cycles of a lead acid battery is directly depending on the regular depth of discharge (DoD) during these cycles. Depending on different types of batteries and the design of the plates and electrodes, the endurance in cycles may vary significantly.

The following chart (refer to fig. 7-8) shows the cycling behavior of a HOPPECKE sun | power VR L (OPzV solar.power/OPzV bloc solar.power) under ideal operating conditions. The cycle life refers to one discharge per day. Endurance in cycles cannot exceed stated service life under float charge conditions. The cycles shown by the following diagrams are measured and calculated according to IEC 61427 and IEC 60896.

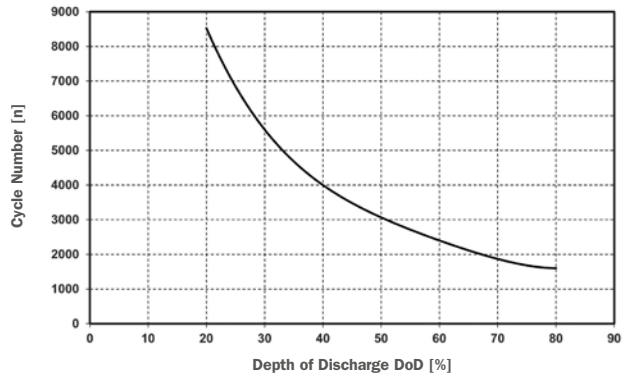


Fig. 7-8: Endurance in cycles of sun | power VR L (OPzV solar.power) as a function of DoD (at 20 °C)

7.4.2 Endurance in cycles depending on ambient temperature

Since design life mainly depends on temperature, the cycle lifetime is affected by temperature as well. Fig. 7-9 depicts this relation for a regular battery depth of discharge of 80 %.

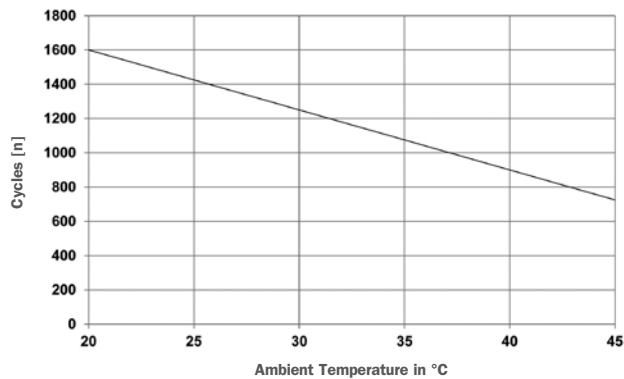


Fig. 7-9: Endurance in cycles of sun | power VR L (OPzV solar.power) as a function of ambient temperature

The following figure depicts dependency of the endurance in cycles on depth of discharge and temperature.

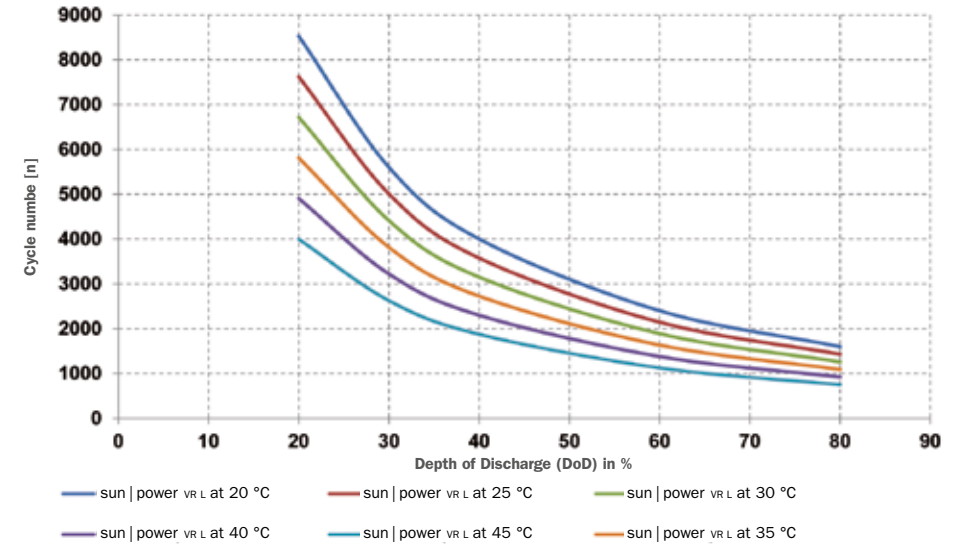


Fig. 7-10: Endurance in cycles of sun | power VR L (OPzV solar.power) depending on DoD and temperature

7.4.3 Electrolyte freezing point depending on depth of discharge (DoD)

The freezing point of the electrolyte (sulfuric acid) rises with increasing depth of discharge.

In case the battery is exposed to cold ambient temperatures (< 0 °C) the maximum depth of discharge has to be decreased in order to avoid electrolyte freezing and potential damages of the cell jar. Fig. 7-11 shows an example for this relation. Example: If depth of discharge is below 60 % the operating temperature must not be below - 23.4 °C.

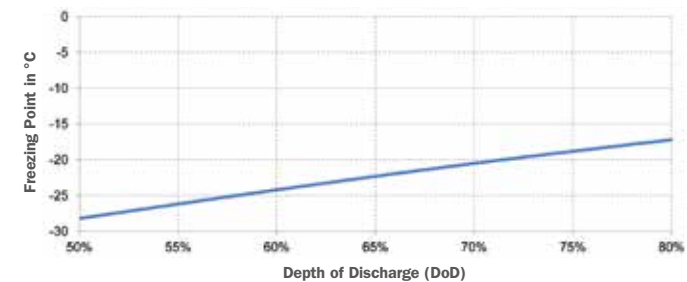


Fig. 7-11: Electrolyte freezing point as a function of depth of discharge (DoD)

7.5 Remarks to warranty management

Above mentioned information about battery performance and service life, particularly concerning the charging procedure and the influence of temperature and cycling, affect terms of warranty as well. In case of a warranty claim the customer/battery operator needs to prove the compliance of above mentioned parameters with the allowed/recommended limits. Corresponding measurement logs have to be sent to the battery manufacturer.

The service life of the battery is valid for operation under optimal conditions only.

For a better understanding of the life time terms, please pay attention to the information leaflet No. 23e (Edition August 2013) of the Fachverband Batterien of the ZVEI – Zentralverband Elektrotechnik und Elektroindustrie (https://www.zvei.org/fileadmin/user_upload/Verband/Fachverbaende/Batterien/Merkblaetter/Industriebatterien/23e_Definition_of_different_life_time_terms_for_batteries_2013-08.pdf). With regard to the assertion of warranty claims only the respective contractual provisions are decisive.

For special demanding operational conditions as well as for solar and off-grid applications the expected battery service lifetime is heavily influenced by above mentioned operational conditions. In order to decide whether a battery failure was caused by manufacturing defects or operational conditions, above mentioned parameters need to be monitored and registered on a regular basis. These data have to be forwarded to the manufacturer for further analysis.

HOPPECKE recommends the usage of a battery monitoring system for monitoring and logging of critical data. Please contact your local HOPPECKE representative for information on HOPPECKE battery monitoring equipment and accessories.

8 Battery maintenance



Danger!

Work on batteries, especially installation and maintenance should be performed by HOPPECKE specialists (or by qualified personnel trained by HOPPECKE) only; personnel must be familiar with battery handling and the required precautionary measures. Unauthorized persons must keep away from the batteries



To ensure the reliability and longevity of your battery system, regular maintenance is required. Document the type and scope of maintenance work performed as thoroughly as possible. These records can be very helpful if troubleshooting is required and are a prerequisite for making warranty claims.

8.1 Work to be performed every six months

Take the following measurements and record the measurement values:

1. Voltage of the complete battery system
2. Individual voltage of selected cells or monobloc batteries
3. Surface temperature of selected cells or monobloc batteries
4. Temperature in battery room



If the cell voltage deviates from the average float charge voltage by more than + 0.2 V/cell or - 0.1 V/cell and/or if the surface temperature of various cells or monobloc batteries differs by more than 5 K, contact customer service.

Also note specifics of lead-acid batteries with electrolytes, fixed in gel. (see chapter 6.2.5)

8.2 Work to be performed annually

Take the following measurements and record the measurement values:

1. Voltage of the complete battery system
2. Individual voltage of **all** cells or monobloc batteries
3. Surface temperature of **all** cells or monobloc batteries
4. Temperature in battery room
5. Perform a visual check of **all** screwed connectors
6. Check **all** screwed connectors to make sure that they are firmly secured
7. Visual check of battery racks or battery cabinets
8. Check to make sure that the battery room is properly ventilated and deaerated

HOPPECKE recommends the use of a stationary battery monitoring system for the inspection of relevant data. Please contact your local HOPPECKE representative for further information.

8.3 Cleaning of the battery



Danger!

Cleaning the batteries on a regular basis is necessary to maintain battery availability and to meet accident prevention regulations.

Batteries should be cleaned at least once per year. Note the following points:

While cleaning the batteries you must wear face protection (impact-resistant visor according to EN 166 class F or similar), safety goggles and safety clothes. To avoid electrostatic charges while handling the batteries your clothes, safety shoes and safety gloves must have a surface resistance of $\leq 10^8 \Omega$.



Danger!

Do not use dry cleaning cloth!

Plastic parts of the batteries, especially the cell container, have to be cleaned with water or water moistened cleaning cloth without additives.

After cleaning the battery surface has to be dried with appropriate measures, like moist antistatic cleaning cloth (e. g. cotton).

9 Testing the battery system

9.1 Performing the capacity test (short form)



For tests, proceed as directed in EN 60896-21: "Stationary lead acid batteries – Part 21: Valve regulated types – Methods of test" (IEC 60896-21:2004). In addition, note special test instructions, e. g. in accordance with DIN VDE 0100-710 and DIN VDE 0100-718.

The following is the short form of the procedure for testing the actual capacity of your battery system. Also observe all instructions in Chap. 9.2.



We recommend performing an equalizing charge on the battery system (as described in Chap. 6.2.5) before performing this test. Perform the equalizing charge no more than 7 days in advance and no less than 3 days in advance!

1. Make sure that all connections are clean, secure and noncorroded.
2. During normal battery operation, measure and record the following parameters:
 - Individual voltage of all cells or monobloc batteries
 - Surface temperature of at least one out of every ten cells or monobloc batteries
 - Voltage of the complete battery system
3. Interrupt the connection between the battery system that you wish to test and the charger and all consumers.
4. Prepare an adjustable load that you can connect to the battery system. **The load current must correspond to the maximum permitted current for which the battery is designed.**
5. Prepare a shunt that you can connect in series with the load.
6. Prepare the voltmeter so that you can test the total voltage of the battery.
7. Connect the load, the shunt and the voltmeter. Simultaneously start a time measurement.
8. Keep the load current constant and measure the voltage of the battery system in regular time intervals.
9. Check the row connectors (block connectors), step connectors and tier connectors for excessive heating.
10. Calculate the capacity of the battery system using the following formula:

$$\text{Capacity (\% at 20 °C)} = (T_a/T_s) \times 100$$
 - T_a = actual discharge time until the permitted minimum voltage is reached.
 - T_s = theoretical discharge time until the permitted minimum voltage is reached.
11. Reconnect the battery system as originally connected and perform a boost charge (see Tab. 5-2).

9.2 Performing the capacity test (extended version)

Preparation

The best and quickest method for preparing batteries for testing is the IU charge method, also used for equalizing charges. Because it is possible to exceed the permitted load voltages, appropriate measures must be taken, e. g. disconnection of the consumers.

The IU characteristic curve with increased voltage (2.33 to 2.40 V) x number of cells is the most common charging characteristic used for commissioning the batteries.

The charge is performed with a constant voltage of max. 2.40 V/cell for up to 48 hours. The charge current should not be higher than 20 A per 100 Ah nominal capacity. If the electrolyte temperature of the cells/blocs exceeds the maximum of 45 °C, terminate the charge or switch to float charge to allow the temperature to drop.

HOPPECKE IU
recharge with IU characteristic

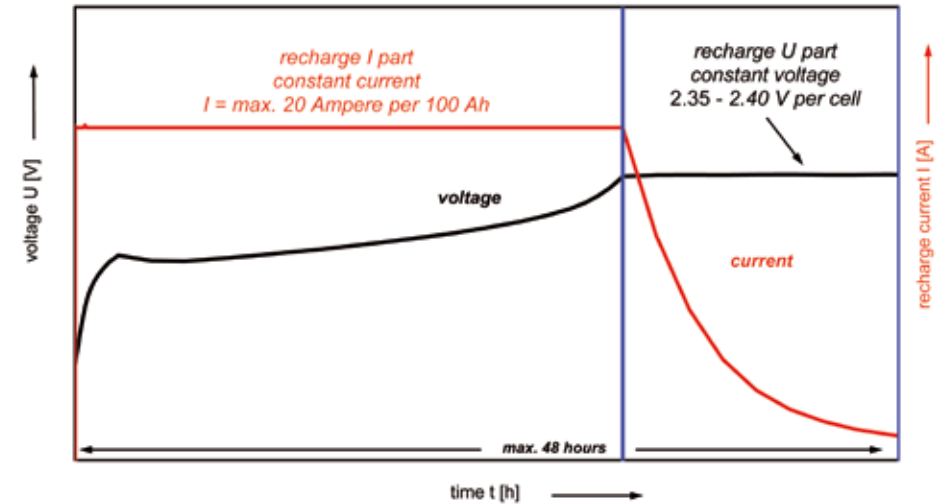


Fig. 9-1: IU characteristic

The IUa charging method is an even better method for preparing the batteries; it is a charge with an additional constant current at the end of the charging. In contrast to the charge with constant voltage, in the last step, after IU charging, a constant charge current with 0.8 A per 100 Ah is applied for 3 hours. The charge voltage can then increase up to 2.65 V per cell.

HOPPECKE IUa
recharge with IUa characteristic

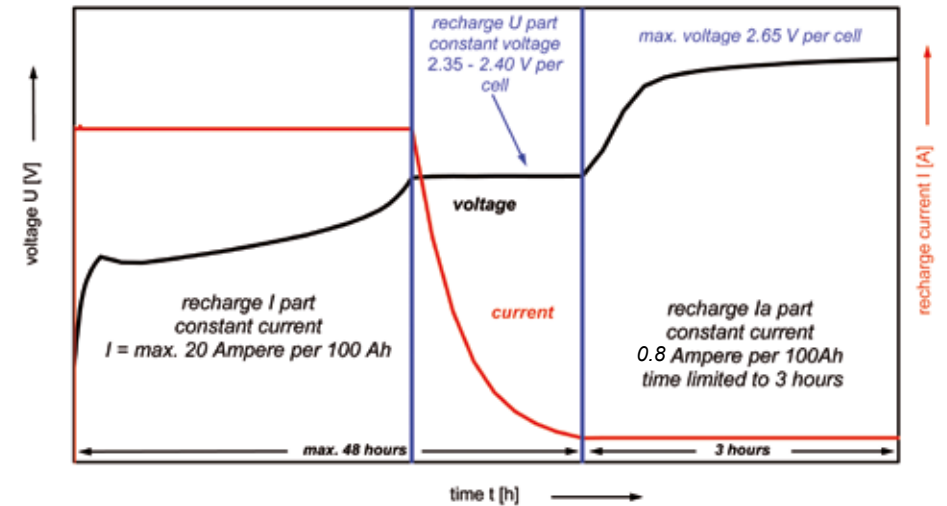


Fig. 9-2: IUa characteristic

Note that an increased proportion of hydrogen is produced and that the battery room must be provided with sufficient ventilation.
Depending on storage time and storage conditions, the battery may require an additional charge for commissioning.
The battery is completely charged when the voltage and the charge current no longer change within a period of 2 hours.

9.3 Capacity test of the battery

Necessary accessories:

- Suitable electronic load or electrical resistance (with adjustable resistance value to adjust the discharge current or discharge load)
- Suitable current probe with sufficient precision for measuring the DC current or shunt for measuring the discharge current
- Voltage measuring device for measuring the electrical voltage
- Thermometer for measuring the battery temperature (surface temperature)
- Clock for measuring the discharge time
- Project planning data table for selecting the correct discharge current or the correct discharge power

Carry out the battery discharge in accordance with the regulations on performing capacity tests EN 60896-21. The discharge current and the discharge power are selected according to the project planning data tables up to a given final discharge voltage and the given potential of the possible discharge loads.

Minimum precision requirements for the measuring devices (precision class):

For voltage measurement:	0.5
For current measurement:	0.5
For temperature measurement:	1 °C
For time measurement:	1 %

Tab 9-1: Precision requirements for the measuring devices

During the capacity test, record the discharge current or discharge power, temperature, battery and cell-/block-voltage and discharge time at intervals of 10 % of the discharge time. At least, record these values at 10 %, 50 %, 80 % and 95 % of the discharge time.
Terminate the discharge when the battery voltage has reached the value $n \times U_i$, where n is the number of cells and U_i is the selected final discharge voltage per cell.
Also terminate the discharge when a cell has reached a voltage of $U = U_i - 200 \text{ mV}$ or a monobloc battery with n cells has reached a voltage of $U = U_i - \sqrt{n} \times 200 \text{ mV}$.

Example:

13 cells 6 OPzV 300
5 h-capacity test
End voltage of the battery = 23.40 V (for 13 cells)
Average voltage per cell = 1.80 V
minimum end voltage of individual cells = 1.60 V

Cell number	Case A	Case B	Case C
1	1.84	1.84	1.79
2	1.83	1.86	1.80
3	1.83	1.87	1.81
4	1.84	1.87	1.80
5	1.84	1.86	1.81
6	1.85	1.86	1.79
7	1.69	1.87	1.78
8	1.84	1.86	1.80
9	1.83	1.59	1.81
10	1.85	1.84	1.81
11	1.84	1.85	1.80
12	1.84	1.85	1.79
13	1.85	1.85	1.79
Battery voltage	23.77 V	23.87 V	23.38 V

Tab 9-2: Measured cell voltages and total voltage after 95 % of the discharge time has elapsed

Case A: a "weak cell," passed capacity test, battery okay
Case B: a faulty cell, failed capacity test, battery not okay
Case C: all cells okay, failed capacity test, battery not okay

The battery must be charged immediately following the capacity test.
The measured capacity C (Ah) at the average start temperature ϑ is calculated as a product of the discharge current (in A) and the discharge time (in hours).
As the battery capacity is dependent on the temperature, the measured battery capacity needs to be adjusted for temperature.
At temperatures higher than 20 °C nominal temperature, the battery capacity increases whereas the capacity decreases at lower temperatures. If the average start temperature ϑ deviates 20 °C from the reference temperature, the capacity must be corrected.
The start temperature is used to carry out the temperature correction in accordance with the standard DIN EN 60896-21 using the equation [1]:

$$C_a = \frac{C}{1 + \lambda (\vartheta - 20 \text{ °C})} \quad [1]$$

C = measured capacity
 λ = correction factor (with $\lambda = 0.006$ for discharges > 3 h and $\lambda = 0.01$ for discharges ≤ 3 h)
 ϑ = start temperature
 C_a = corrected capacity

According to the DIN EN 60896-21 standard, the battery has passed the capacity test when 95 % of the required power is attained in the first capacity test. After the 5th discharge, 100 % of the required power must be attained.
After discharging, a log must be made (see *Inspection record*).



Attention!

When handling batteries (e. g. performing capacity tests) you must observe the safety requirements in accordance with IEC 62485-2 (insulated tools, protective eyewear, protective clothing, gloves, ventilation, etc.)!

9.4 Notes on impedance measurement

Impedance measurement can also be a backup battery check. Please note that there is no standardized measurement specification for this type of measurement and therefore a few points must be observed. In order to be able to use the results of an impedance measurement sensibly and correctly, follow the instructions from ZVEI leaflet no. 34.

10 Troubleshooting



If malfunctions occur in the battery or charger, contact customer service immediately. Measured data as described in *Chap. 8.1* simplifies fault detection and elimination. A service contract with us facilitates the timely detection of faults.

11 Required ventilation for hydrogen generated by batteries

Compliance with VDE 0510 Part 2 or IEC 62485-2 is required to ensure safe ventilation and prevent dangerous mixtures of hydrogen and oxygen gases (hydrogen approx. 4 %). Two values form the basis of the equation: the maximum permissible hydrogen concentration in the air is 4 % and the safety factor is 5. The equation can be derived accordingly:

$$v = \frac{100\% - 4\%}{4\%} \quad (\text{Attenuation factor at maximum permissible hydrogen concentration})$$

$$q = 0,42 \times 10^{-3} \frac{\text{m}^3}{\text{Ah}} \quad (\text{Quantity of accumulated hydrogen per actual Ah capacity})$$

$$s = 5 \quad (\text{safety factor})$$

$$v \times q \times s = 0,05 \frac{\text{m}^3}{\text{Ah}}$$

This results in the total equation for the necessary ventilation in [in m³/h]:

$$Q_{\text{air}} = 0.05 \times n \times I_{\text{gas}} \times C_N \times 10^{-3}$$

$$I_{\text{gas}} = I_{\text{float}} \times f_g \times f_s \text{ resp. } I_{\text{gas}} = I_{\text{boost}} \times f_g \times f_s$$

$$Q_{\text{air}} = \text{Necessary ventilation/air flow rate [in m}^3/\text{h]}$$

$$n = \text{Number of cells}$$

$$I_{\text{float}} = \text{Proportion of charge current in mA/Ah used for water dissociation on float charge per 1 Ah nominal capacity of the battery.} = 1 \text{ mA/Ah}$$

$$I_{\text{boost}} = \text{Proportion of charge current in mA/Ah used for water dissociation on boost charge per 1 Ah nominal capacity of the battery.} = 8 \text{ mA/Ah}$$

$$C_N = \text{Nominal capacity of the battery (C}_{10}\text{ capacity).}$$

$$f_g = \text{Gas emissions factor. Proportion of the charge current responsible for hydrogen accumulation.} = 0.2$$

$$f_s = \text{Safety factor which includes the potential for faults resulting from a damaged cell (possible short circuit) and battery aging.} = 5$$

Example 1:

A battery with 2 x 60 V (60 V nominal voltage), 4 OPzV 200 (200 Ah) is equivalent to 2 x 30 cells. The battery is on float charge at 2.25 V per cell.

$$C_N = \text{Nominal capacity of the battery} = 200 \text{ Ah}$$

$$n = \text{Number of cells} = 2 \times 30 \text{ cells}$$

$$f_g = \text{Gas emissions factor} = 0.2$$

$$f_s = \text{Safety factor} = 5$$

$$I_{\text{float}} = 1 \text{ mA/Ah}$$

$$Q_{\text{air}} = 0.05 \frac{\text{m}^3}{\text{Ah}} \times 2 \times 30 \text{ Cells} \times 1 \frac{\text{mA}}{\text{Ah}} \times 200 \text{ Ah} \times 1 \times 5 \times 0.2 \times 10^{-3}$$

$$Q_{\text{air}} = 0.6 \frac{\text{m}^3}{\text{h}}$$

Result: For a 60 V battery composed of 2 x 30 cells 4 OPzV 200 operating on float charge, an airflow of 0.6 m³/h is required for proper ventilation.

What is the appropriate diameter for intake and exhaust openings with natural ventilation?

The necessary cross-section for ventilation openings can be calculated using the following formula:

$$A = Q_{\text{air}} \times 28$$

$$Q_{\text{air}} = \text{Necessary ventilation [in m}^3/\text{h]}$$

$$A = \text{Necessary cross-section for ventilation openings [in cm}^2\text{]}$$

$$A = 0.6 \frac{\text{m}^3}{\text{h}} \times 28 = 16.8 \text{ cm}^2$$

Result: Ventilation openings (intake and exhaust) with a cross-section of **16.8 cm²** ensure ventilation with an airflow of 0.6 m³/h.

What factors must be considered when installing a natural ventilation system?

If possible, the ventilation openings should be positioned on opposite walls. If they must both be on the same wall, make sure to maintain a distance of at least 2 m between the openings.

12 Disassembly

Observe all safety precautions for disassembly of the battery system (refer to *chapter 0,1 and 2*). This includes among others personal safety equipment, protective clothing and usage of insulated tools.

Proceed in the following way:

- Before starting ensure that all electrical loads are switched off (separators, fuses, switches). This must be carried out by qualified personnel. Ensure that the battery is disconnected from all charging devices and electrical loads.
- For battery systems with nominal voltage > 60 V: Remove group-/step connectors first in order to divide the battery system voltage in smaller partial voltages. Removed connector and post terminal bolts need to be removed from the battery immediately. You must not use automatic screwdrivers for loosening the post terminal bolts.
- Remove the connectors between cell/blocks. Removed connector and post terminal bolts need to be removed from the battery immediately. You must not use automatic screwdrivers for loosening the post terminal bolts.
- Battery cells/blocks need to be packed according to ADR 598B. Visible damaged cells/blocks must be packed (e. g. Paloxe) and transported separately. Refer also to *chapter 1.4*.

13 References to the standards and regulations

The references to the applicable standards, regulations etc. should help you to install and use the HOPPECKE products correctly. However, it is not possible to quote all regulations and applicable standards according to the latest edition always. Therefore, these quotes are to be understood as support and not as direct instructions. In order to implement the specifications of the standards/regulations, the current and applicable standard or regulation must be available, regardless of the edition of the standard/regulation, which is cited here in the HOPPECKE manual.

Instructions for the safe handling of lead-acid accumulators (lead-acid batteries)

The REACH-regulation (1907/2006/EC) has replaced the directive on safety data sheets (91/155/EC). REACH describes the setting up and updating of safety data sheets for substances and preparations. For articles – like lead-acid batteries – safety data sheets are not required.

This leaflet addresses manufacturers of batteries and is meant to apply voluntarily.

The notes are meant to help to comply with legal requirements but do not replace them.

2. Hazardous substances

CAS-No.	Description	Content	R-phrases
7439-92-1	blue lead		–
7439-92-1	lead alloys with traces of As,Sb	34 Weight %	–
	lead-containing Battery paste	31 Weight %	R 61-20/22-33-62-52/53
7664-93-9	sulphuric acid	34 Weight %	R 35

3. Potential hazards

1. Substances / formulation and company name

Data on the product
Trade name

Lead-acid battery filled with diluted sulphuric acid

Data on the manufacturer:

Telephone:
Facsimile:

- No hazards in case of an intact battery and observation of the instructions for use.
- Lead-acid batteries have significant characteristics:
- They contain diluted sulphuric acid, which may cause severe acid burns.
 - During the Charging process they develop hydrogen gas and oxygen, which under certain circumstances may turn into an explosive mixture.
 - They have an internal voltage, which – depending on their level – can be dangerous to the human body when touched.
 - Standard EN 50272-2¹⁾ includes safety requirements for batteries and battery installations and describes the basic precautions to protect against dangers deriving from electric currents, leaking gases or electrolytes.

Batteries are marked with the following hazard symbols:

The meaning of the hazard symbols is:



No smoking, no open flames, no sparks.



Wear safety goggles.



Sulphuric acid.



Observe operating instructions.



Explosive gas mixture.

6. Measures to be taken in case of unintentional release

Cleaning / take-up procedures

Use a bonding agent, such as sand, to absorb split acid;

Use lime / sodium carbonate for neutralisation; dispose with due regard to the official local regulations, do not permit penetration into the sewage system, the earth or water bodies.

4. First-aid measures

General Information:

Sulphuric acid	acts corrosive and damages tissue
<i>after contact with skin</i>	rinse with water, remove and wash wetted clothing
<i>after inhalation of acid mist*)</i>	inhale fresh air
<i>after contact with the eyes*)</i>	rinse under running water for several minutes
<i>after swallowing*)</i>	drink a lot of water immediately, and swallow activated carbon
Lead-containing battery paste	classified as toxic for reproduction
<i>after contact with skin</i>	clean with water and soap

*) seek the advice of a doctor.

7. Handling and storage

Store frost-free under roof; prevent short circuits.

Protect plastic housings against exposition to direct sun radiation.

Seek agreement with local water authorities in case of larger quantities.

If batteries have to be stored in storage rooms, it is imperative that the instructions for use are observed.

5. Fire-fighting measures

Suitable extinguishing agents

When electrical devices are set in fire in general water is the suitable extinguishing agent. For incipient fires CO₂ is the most effective agent. Fire brigades are trained to keep a distance of 1 m when extinguishing an electrical fire (up to 1 kV) with spray jet and a distance of 5 m with full jet. For electrical fires in electrical installations with voltages > 1 kV other distances are applicable depending on the respective voltage. For fires in photovoltaic installations other rules apply.

Unsuitable extinguishing agents

Powder fire extinguishers are not suitable, amongst others because of only minor efficiency, possible risks or collateral damages.

Special protective equipment

For larger stationary battery installations or larger stored quantities: protective goggles, respiratory and acid protective equipment, acid-proof clothing.

8. Exposure limits and personal protective equipments

8.1 No exposure caused by lead and lead-containing battery paste.

8.2 Possible exposure caused by sulphuric acid and acid mist during filling and charging.

CAS-Nr.	7664-93-9
R-phrases	R – 35 Causes severe burns.
S-phrases	S – 1/2 Keep looked up and out of reach of children.
	S – 26 In case of contact with eyes rinse immediately with plenty water and seek medical advice.
	S – 30 Never add water to this product (applies for concentrated acid only)
	S – 45 In case of accident or if you feel unwell seek medical advice immediately (show the label where possible)
Threshold value on workplace	0,1 mg/m ³ *)
Hazard symbol	C, corrosive
Personal protective equipment:	Rubber, PVC gloves, acid-proof goggles, acid-proof clothing, safety boots.

³⁾ 0,5 mg/m³ at the lead battery production.

9. Physical and chemical properties

Lead

Appearance:
form: solid
colour: grey
odour: odourless

Safety-related data

Solidification point: 327 °C
Boiling point: 1740 °C
Solubility in water (25 °C):
low (0,15 mg/l)
density (20 °C): 11,35 g/cm³
vapour pressure (20 °C)

Sulphuric acid (30 – 38,5 %)

form: liquid
colour: colourless
odour: odourless

Solidification point:

– 35 bis – 60°C

Boiling point: ca. 108 – 114 °C

Solubility in water (25 °C):
complete

density (20 °C): 1,2 – 1,3 g/cm³
vapour pressure (20 °C)

10. Stability and reactivity of sulphuric acid (30 to 38,5%)

- Corrosive, inflammable liquid.
- Thermal decomposition at 338 °C.
- Destroys organic materials such as cardboard, wood, textiles.
- Reacts with metals producing hydrogen.
- Vigorous reactions with lyes and alkalis.

11. Data on toxicology of the constituents

Sulphuric acid

acts intensely corrosive on skin and mucous membranes. The inhalations of mists may cause damage to the respiratory tract.

Lead and lead-containing battery paste

may cause damage to the blood, nerves, and kidneys when taken in. Lead-containing battery paste is classified as toxic for reproduction.

12. Data on the ecology of the constituents

Preliminary remark:
Relevant only if release is caused by destruction of the battery

Sulphuric acid

Water-polluting liquid within the meaning of the German Water-Resources Act (WHG) Water pollution class: 1 (mildly water polluting).

As described in section 6 use a bonding agent, such as sand, to absorb spilled acid or neutralise using lime / sodium carbonate. Dispose of under the locally applicable provisions.

Dispose with due regard to official local regulations,

Do not allow progression into the sewage system, soil or bodies of water.

Lead and lead-containing battery paste

are hardly soluble in water.

Lead can be dissolved in an acidic or alkaline environment. Chemical and physical treatment is required for elimination from water. Waste water containing lead must not be disposed of in untreated condition.

13. Recycling information

The points of sale, the manufacturers and importers of batteries, respectively the metal dealers take back dead batteries, and render them to the secondary lead smelters for processing.

Spent lead-acid batteries are not subject to accountability of the German Waste Prove Ordinance. They are marked with the recycling / return symbol and with a crossed-out roller container (cf. chapter 15 "Marking").

Spent lead-acid batteries are not allowed to be mixed with other batteries in order not to compliance the processing.

By no means may the electrolyte, the diluted sulphuric acid, be emptied in an expert manner. This process is to be carried out by the processing companies.

14. Transport instructions

14.1 Batteries, wet, filled with acid

Land transportation according to ADR/RID

- Special Provision 598: **no transport as dangerous goods** (new + spent batteries are not subject to other requirements of ADR/RID if they meet the requirements according to Special Provision 598)

- If the requirements of Special Provision 598 are not fulfilled the transport of new and spent batteries has **to be declared as dangerous goods** as follows:

- Hazard class: 8
- UN-no.: 2794

- Naming and description: BATTERIES, WET, FILLED WITH ACID

- Packing group: none
- Hazard label: 8
- ADR Tunnel restriction code: E

Sea transportation according to IMDG Code

- Hazard class: 8

- UN-no.: 2794
- Proper shipping name: BATTERIES, WET, FILLED WITH ACID
- Packaging group: none
- EmS: F-A, S-B
- Packaging Instruction: P 801
- Hazard label: 8

Air transportation according to IATA-DGR

- Class: 8
- UN-no.: 2794
- Proper shipping name: BATTERIES, WET, FILLED WITH ACID
- Hazard class: 8
- Packaging Instruction: 870

14.2 Batteries, wet, non-spillable

Land transportation according to ADR/RID

- Un-no.: 2800
- Hazard class: 8
- Proper shipping name: BATTERIES, WET, NON-SPILLABLE
- Packing group: none
- Packaging Instruction: P 003
- Hazard label: 8
- Special Provision 238 para. a) + b): **no transport as dangerous goods** (non-spillable batteries are not subject to other requirements of ADR/RID if they meet the requirements according to special provision 238. **An appropriate manufacturer's confirmation is necessary.** Batteries which do not meet the requirements according to Special Provision 238 have to be packed and carried as listed in 14.1 Land transportation ADR/RID according to Special Provision 598.)

Sea transportation according to IMDG Code

- Hazard class: 8
- UN-no.: 2800
- Proper shipping name: BATTERIES, WET, NON-SPILLABLE
- Packing group: none
- Packaging Instructions: P 003 and PP 16

- Hazard label: 8
- EmS: F-A, S-B
- Special Provision 238 no. 1 + 2: **no transport as dangerous goods** (non-spillable batteries are not subject to other requirements of IMDG Code if they meet the requirements according to Special Provision 238. **An appropriate manufacturer's confirmation is necessary.** Batteries which do not meet the requirements according to Special Provision 238 have to be packed as listed in 14.1 Sea transportation IMDG Code according to Packaging Instruction P 801 and carried as dangerous goods according to UN 2794.)

Air transportation according to IATA DGR

- Hazard class: 8
- UN-no.: 2800
- Proper shipping name: BATTERIES, WET, NON-SPILLABLE
- Packing group: none
- Packaging Instruction: 872
- Hazard label: 8
- Special Provision A 67: **no transport as dangerous goods** (non-spillable batteries are not subject to other requirements of IATA DGR if they meet the requirements of Special Provision A 67. Provided that poles are secured against short-circuit. **An appropriate manufacturer's confirmation is necessary.** Batteries which do not meet the requirements according to Special Provision A 67 have to be packed as listed in 14.1 Air transportation IATA-DGR according to Packaging Instruction 870 and carried as dangerous goods according to UN 2794.)

14.3 Batteries, damaged: Land transportation according to ADR/RID

- Hazard class: 8
- UN-no.: 2794
- Proper shipping name: BATTERIES, WET, FILLED WITH ACID
- Packing group: none

- Packing Instruction P 801 at: **transport as dangerous goods** (packing in accu boxes) or Special Provision VV 14: **transport as dangerous goods** (in bulk)
- Hazard label: 8
- ADR Tunnel restriction code: E
- Note: these references can be applied by transportation of Lead-acid batteries of UN-no. 2800 as well.

15. Marking

In accordance with the German law governing the sale, return and environmentally sound disposal of batteries and secondary cells (Batteries Act – Batteriegesetz, BattG) from 25 June 2009 (national transposition of directive 2006/66/EC (battery directive) lead-acid batteries have to be marked with a crossed-out wheelee bin with the chemical symbol for lead Pb shown below.



In addition, the ISO-return / recycling symbol is rendered.



The manufacturer, respectively the importer of the batteries shall be responsible for the attachment of the symbols. In addition, a consumer / user information on the significance of the symbols has to be attached, which is required by the German Battery Ordinance quoted above as well as by the voluntary agreement of the battery manufactures concluded with the German Federal Minister of the Environment in September 1988.

The manufactures and sellers of the batteries subject to identification requirements (packaging, technical instructions, leaflets) shall be responsible for this information.

16. Other information

The data rendered above are based on today's knowledge, and do not constitute an assurance op properties. Existing laws and regulations have to be observed by the recipient pf the product in own responsibility.



Editor:
ZVEI – Zentralverband Elektrotechnik- und Elektronikindustrie e. V.
Fachverband Batterien
Lyoner Straße 9
60528 Frankfurt

Fon.: +49 69 6302-283
Fax: +49 69 6302-362
Mail: batterien@zvei.org

© ZVEI 2012

In spite of all due care, however, we cannot accept any liability that the information is complete or correct or up to date.



Fachverband Batterien
Postfach 70 12 61
60591 Frankfurt am Main

Lyoner Straße 9
60528 Frankfurt am Main

Tel.: (0 69) 63 02-209
Fax: (0 69) 63 02-279
e-mail: batterien@zvei.org

Information Leaflet

Safety data sheet on accumulator acid (diluted sulphuric acid) (in compliance with EC Directive 91/155/EU)

1 Substance / formulation and company name

Data on the product: **diluted sulphuric acid (1,22 . . . 1,29 kg/l)**
Trade name: **accumulator acid**

Data on the manufacturer:

Telephone: Facsimile:

2 Composition / data on the constituents

Chemical characteristics:
Sulphuric acid: 30 . . . 38,5%ig, density 1,22 . . . 1,29 kg/l
CAS-Number: 7664-93-9
EU-Number: 016-020-00-8
UN-Number: 2796
EINECS-Number: 231-639-5

3 Potential hazards

Diluted sulphuric acid may cause severe acid burns

4 First-aid measures

General instructions:	Remove soiled, wetted clothing immediately.
after contact to skin	Rinse with a lot of water immediately after contact to skin.
after inhalation of acid mist *)	Inhale fresh air.
after contact with the eyes *)	Rinse under running water for several minutes.
after swallowing *)	Drink a lot of water immediately, and swallow activated carbon.

*) Seek the advice of a doctor.

This leaflet was prepared within the Committee on Environmental Affairs of the Division Batteries of the German Electrical and Electronic Manufacturers' Association, ZVEI.
(Revised Edition November 2003).

5 Fire-fighting measures

Suitable extinguishing agents in case of surrounding fires: CO₂ and solid existing extinguishing agent.

6 Measures to be taken in case of unintentional release

Cleaning / take-up procedures: Use a bonding agent, such as sand, to absorb spilt acid; use lime / sodium carbonate for neutralisation, dispose with due regard to the official local regulations.

7 Handling and storage

Store frost-free under roof. Seek agreement with local water authorities in case of larger quantities. Observe VAWS.

10 Stability and reactivity of the sulphuric acid (30 . . . 38.5 %)

- Corrosive, inflammable liquid.
- Thermal decomposition at 338 °C.
- Destroys organic materials, such as cardboard, wood, textiles.
- Reacts with metals producing hydrogen.
- Vigorous reactions with lyes and alkalis.

11 Data on the toxicology of the constituents

- acts intensely caustic on skin and mucous membranes, in low concentration already. The inhalation of mists may cause damage to the respiratory tract.

8 Exposure limits and personal protective equipment

Possible exposure caused by sulphuric acid and acid mist during filling and charging:

Threshold value on workplace: 0,1 mg/m³ *
Personal protective equipment: Rubber, PVC gloves, acid-proof goggles, acid proof clothing safety boots

¹⁾ 0,5 mg/m³ at the lead battery production

9 Physical and chemical properties

Appearance

form: liquid
colour: colourless
odour: odourless

Safety-related data

solidification point: - 35 . . . - 60 °C
boiling point: approx. 108 . . . 114 °C
Solubility in water: complete
flash point: N.A.
ignition temperature: N.A.
lower explosive limit: N.A.
density (20 °C): (1.2 - 1.3) g/cm³
vapour pressure (20 °C): 14.6 mbar
bulk density: N.A.
pH value: < 1 (at 20 °C)
dynamic viscosity: approx. 2.8 mPa . s (at 20 °C)

12 Data on the ecology of the constituents

- Water-polluting liquid within the meaning of the German Water Resources Act
- Water pollution class: 1 (mildly water polluting).
- In order to avoid damage to the sewage system, the acid has to be neutralised by means of lime or sodium carbonate before disposal.
- Ecological damage is possible by change of pH.

13 Instructions for processing / disposal

- The batteries have to be processed / disposed of with regard to the official local regulations.

14 Transport regulations

Land transport:	ADR RID	chapter 3.2, UN 2796 chapter 3.2, UN 2796
Description of the goods:	Battery, fluid, Acid Danger number: UN number:	80 2796
Sea transport:	IMDG-Code	chapter 3.2, UN 2796
Air transport:	IATA-DGR	chapter 3.2, sulphuric acid
Other data:	Dispatch per mail service	impermissible

15 Regulations

Marking according to	German Regulations on Hazardous Materials	Identification requirement C, corrosive
Danger symbol		Causes severe burns.
R-phrases	35	Keep locked up and out of reach of children
S-phrases	1 / 2	In case of contact with eyes rinse immediately with plenty of water and seek medical advice
	26	Never add water to this product ¹⁾
	30	In case of accident or if you feel unwell seek medical advice immediately (show the label where possible).
	45	

¹⁾ applies for concentrated acid only, and not for refilling the battery with water

National regulations:

Water pollution class:	1 (list material)
Other regulations:	To be observed in case of storage: German Water Resources Act

16 Miscellaneous data

The data rendered above are based on today's knowledge, and do not constitute an assurance of properties. Existing laws and regulations have to be observed by the recipient of the product in own responsibility.

Installation, commissioning and operating instructions

for valve-regulated stationary lead-acid batteries